




Quantum Flex® Air X350/X360







Quantum Flex® Air X440

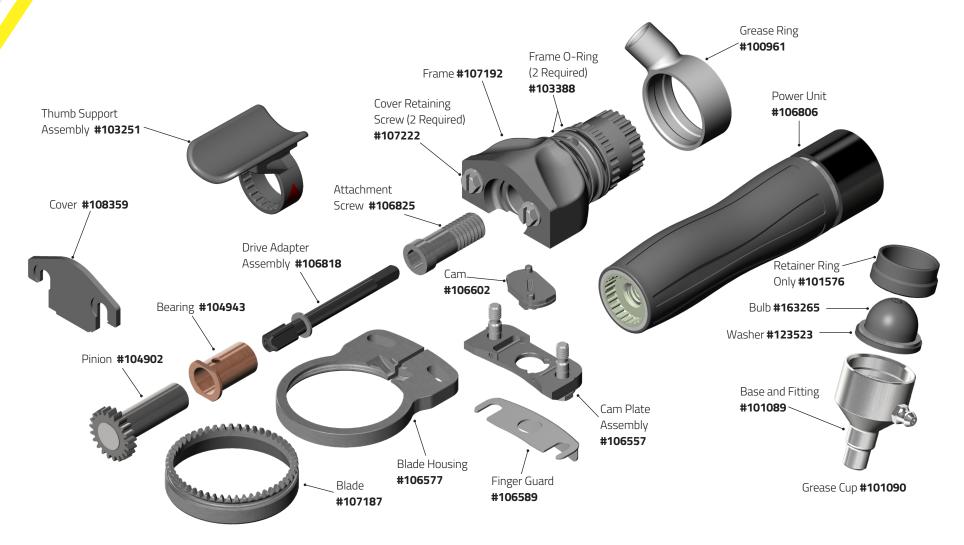









Quantum Flex® Air X500/X505/ X500A

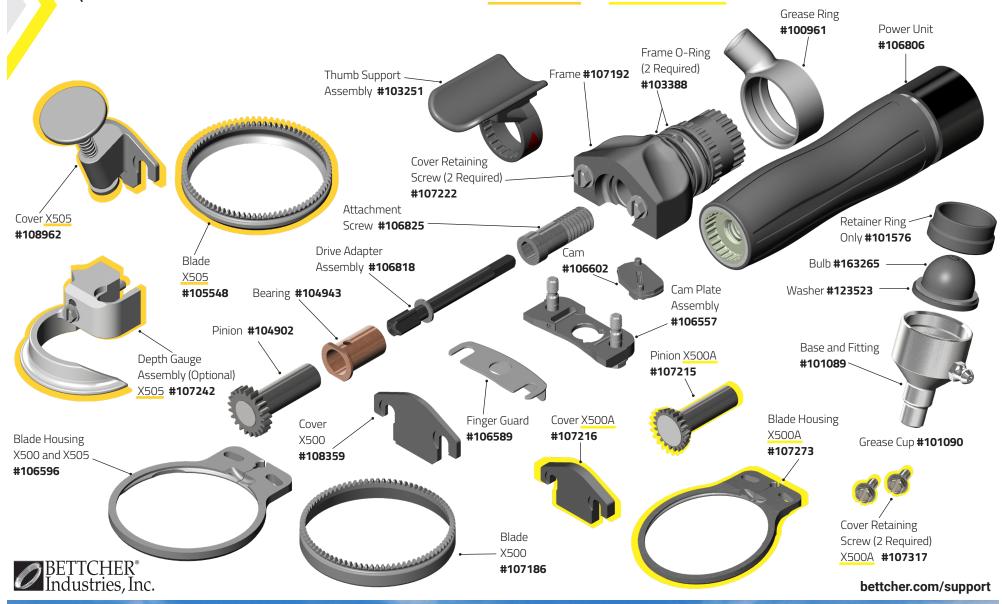





Quantum Flex® Air X564

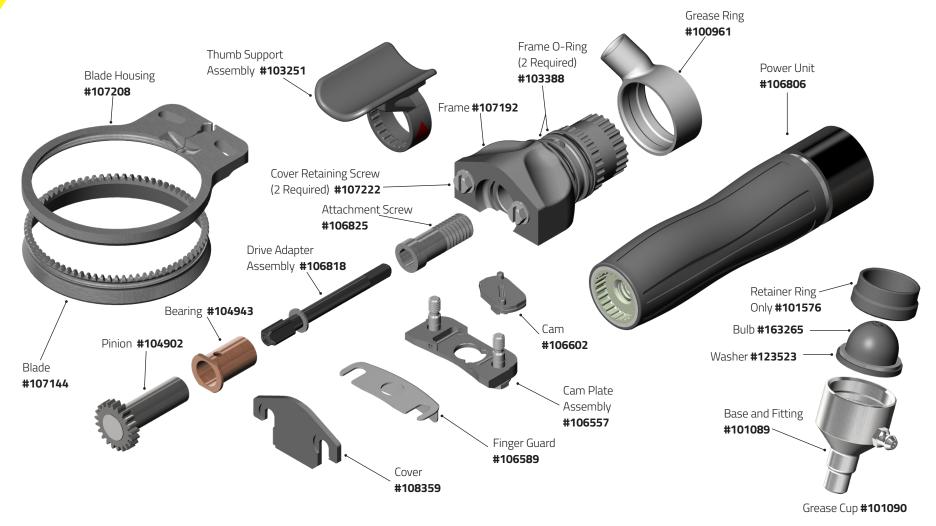








Quantum Flex® Air X620/X625/ X620A







Quantum Flex® Air X750

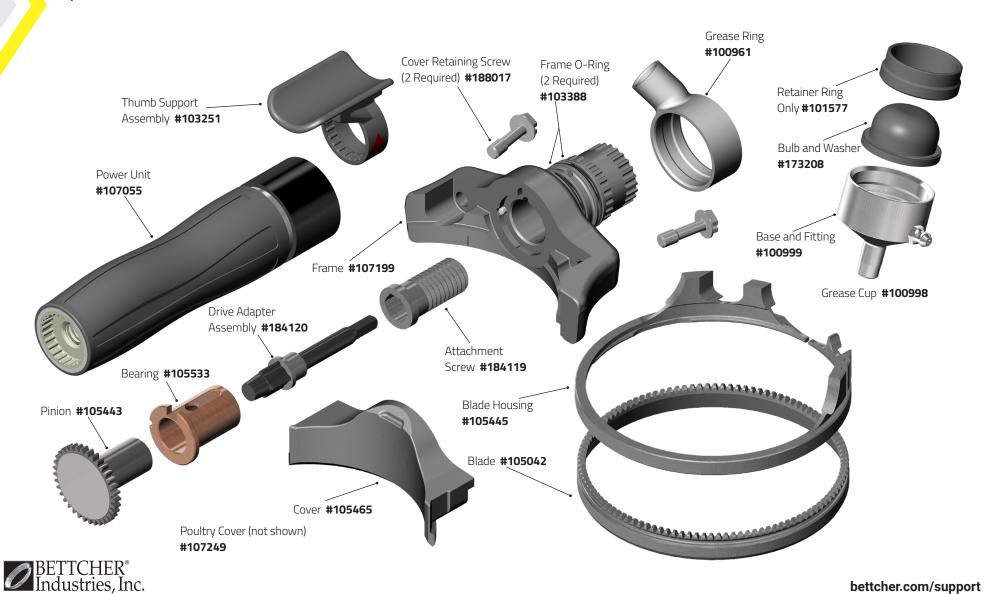






Quantum Flex® Air X850/X880B & X880S








Quantum Flex® Air X1000 & X1500

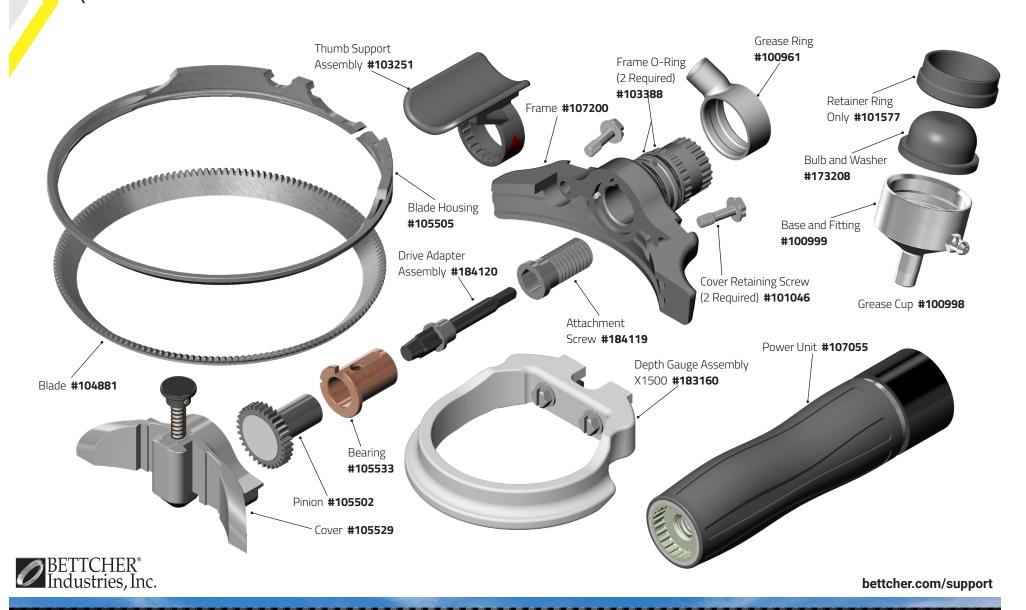





Quantum Flex® Air X1300 & X1400

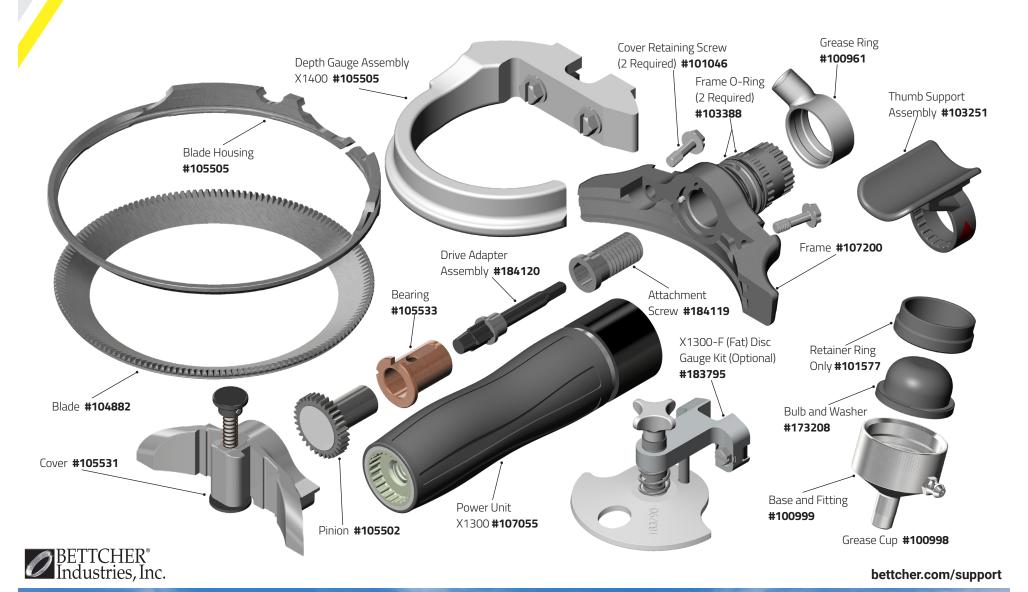






Quantum Flex® Air X1850 & X1880








Quantum Flex® Air Handle & Motor

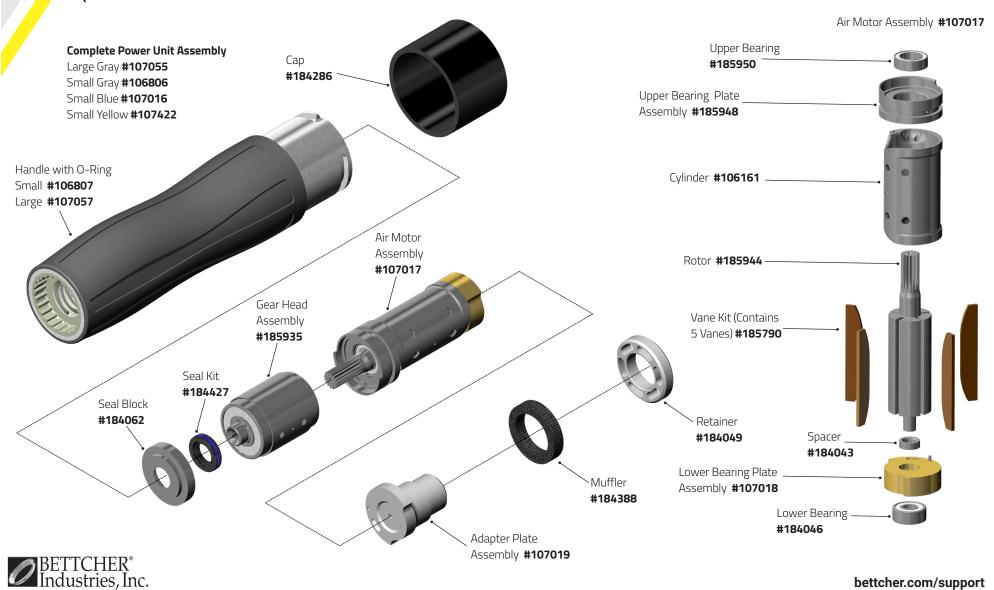





Quantum Flex® Air Motor Maintenance Kit

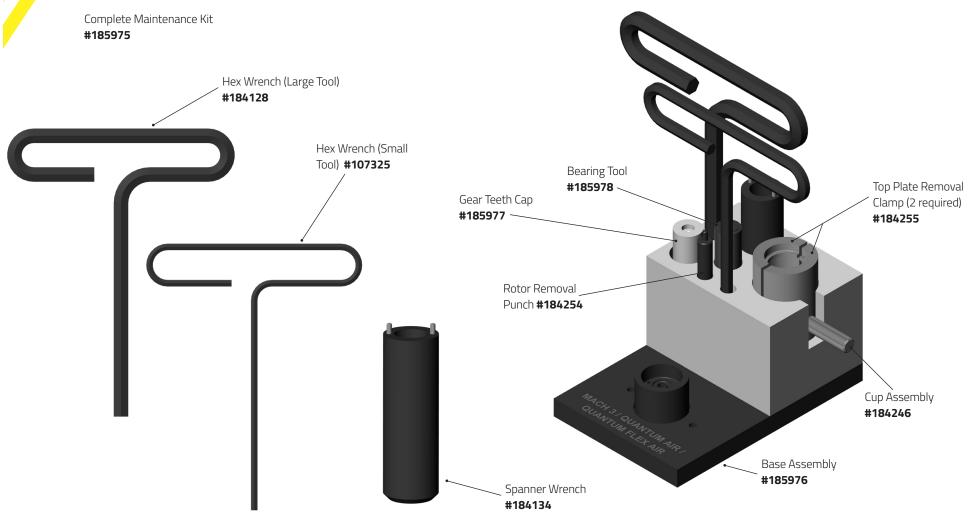









Quantum Flex® Air Parts & Accessories

Optional and Replacement Parts

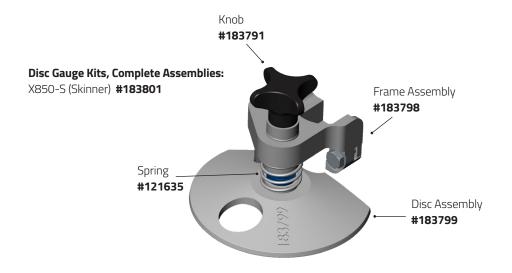

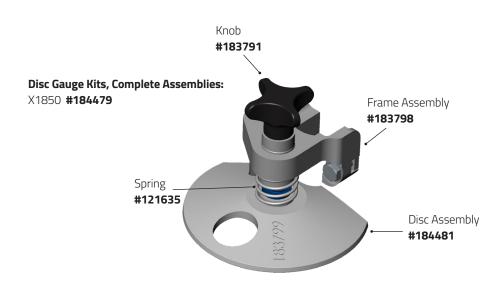









Quantum Flex® Air Parts & Accessories

Optional and Replacement Parts

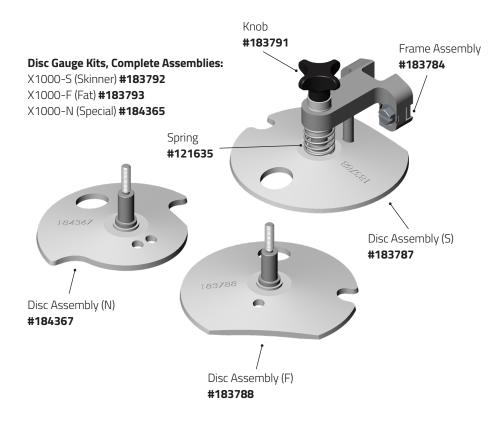

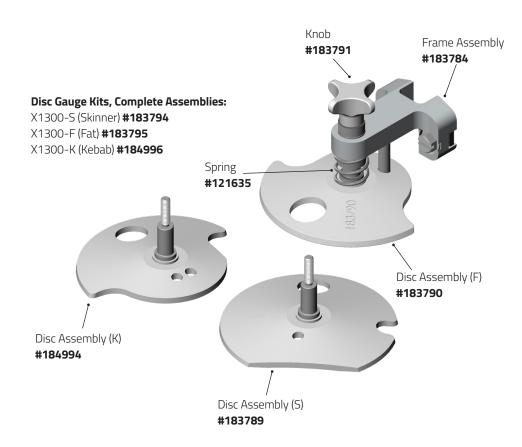








Quantum Flex® TrimVac® 18 Head Assembly

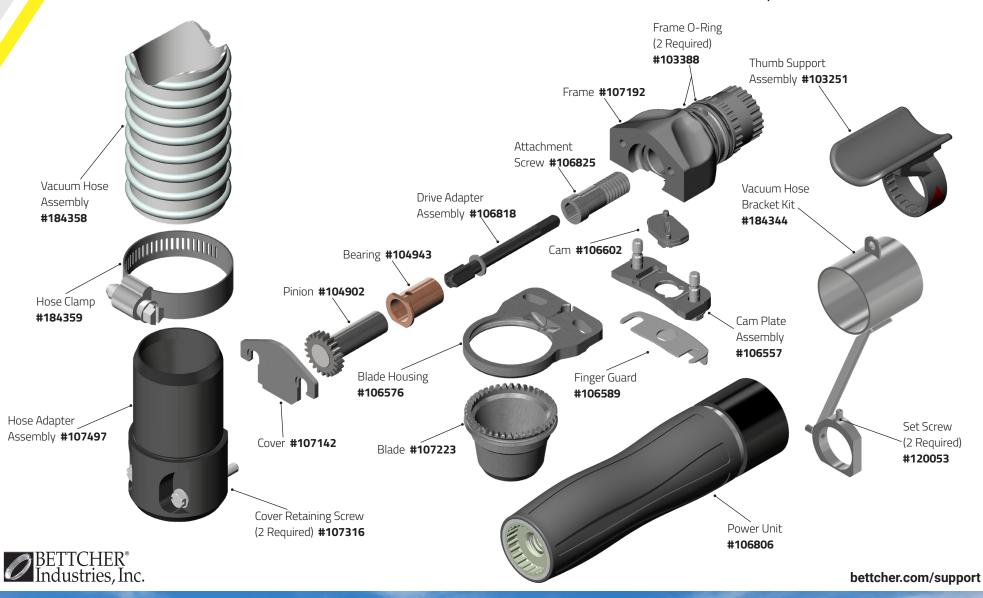






Quantum Flex® TrimVac® 45 Head Assembly







Valve and Hose Assembly

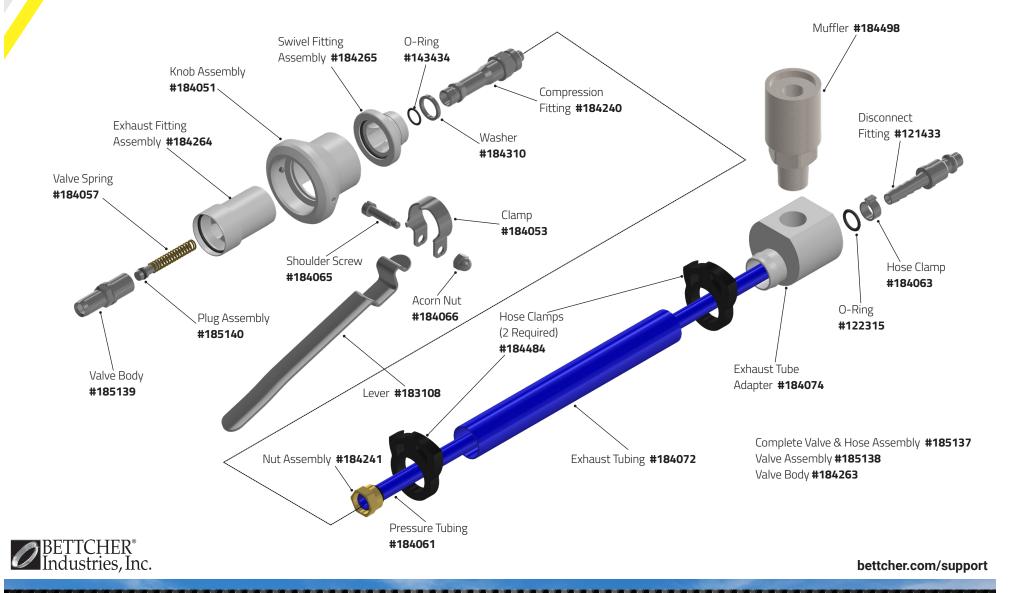





Quick Start Valve and Hose Assembly

