


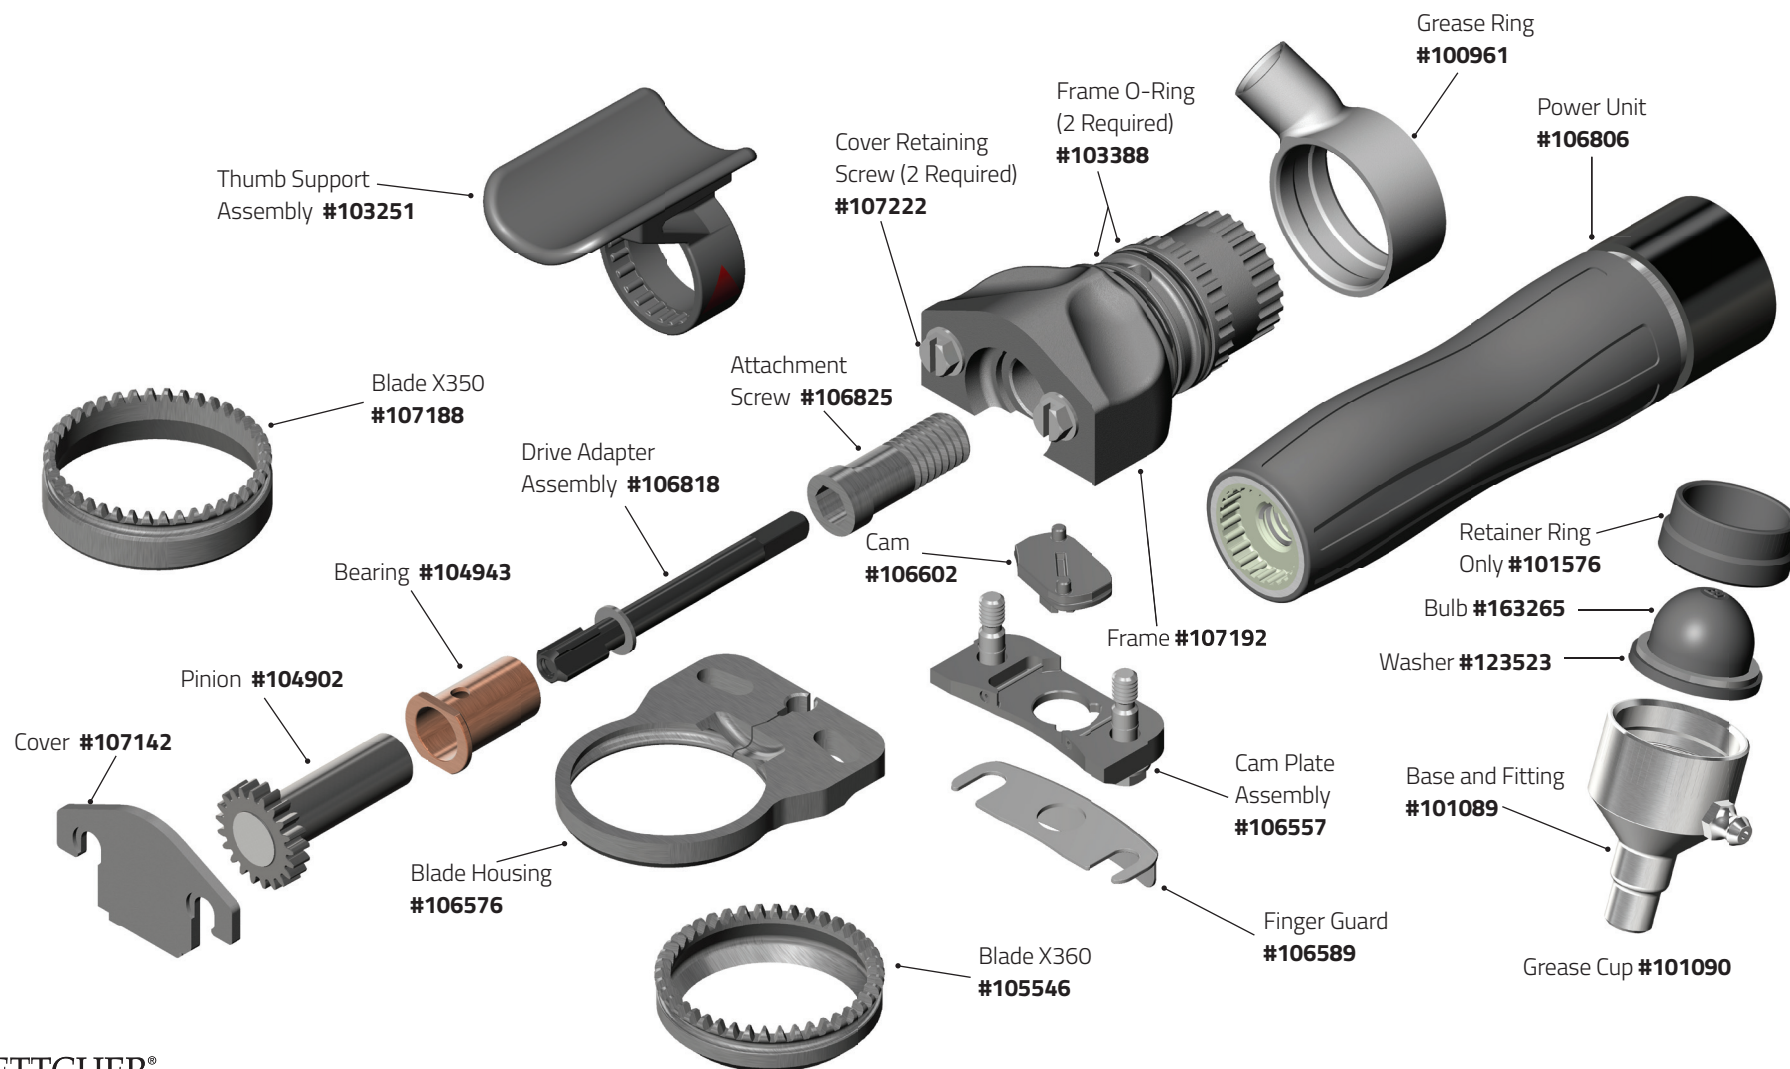


# Quantum Flex® Air X350/X360






# Quantum Flex® Air X440

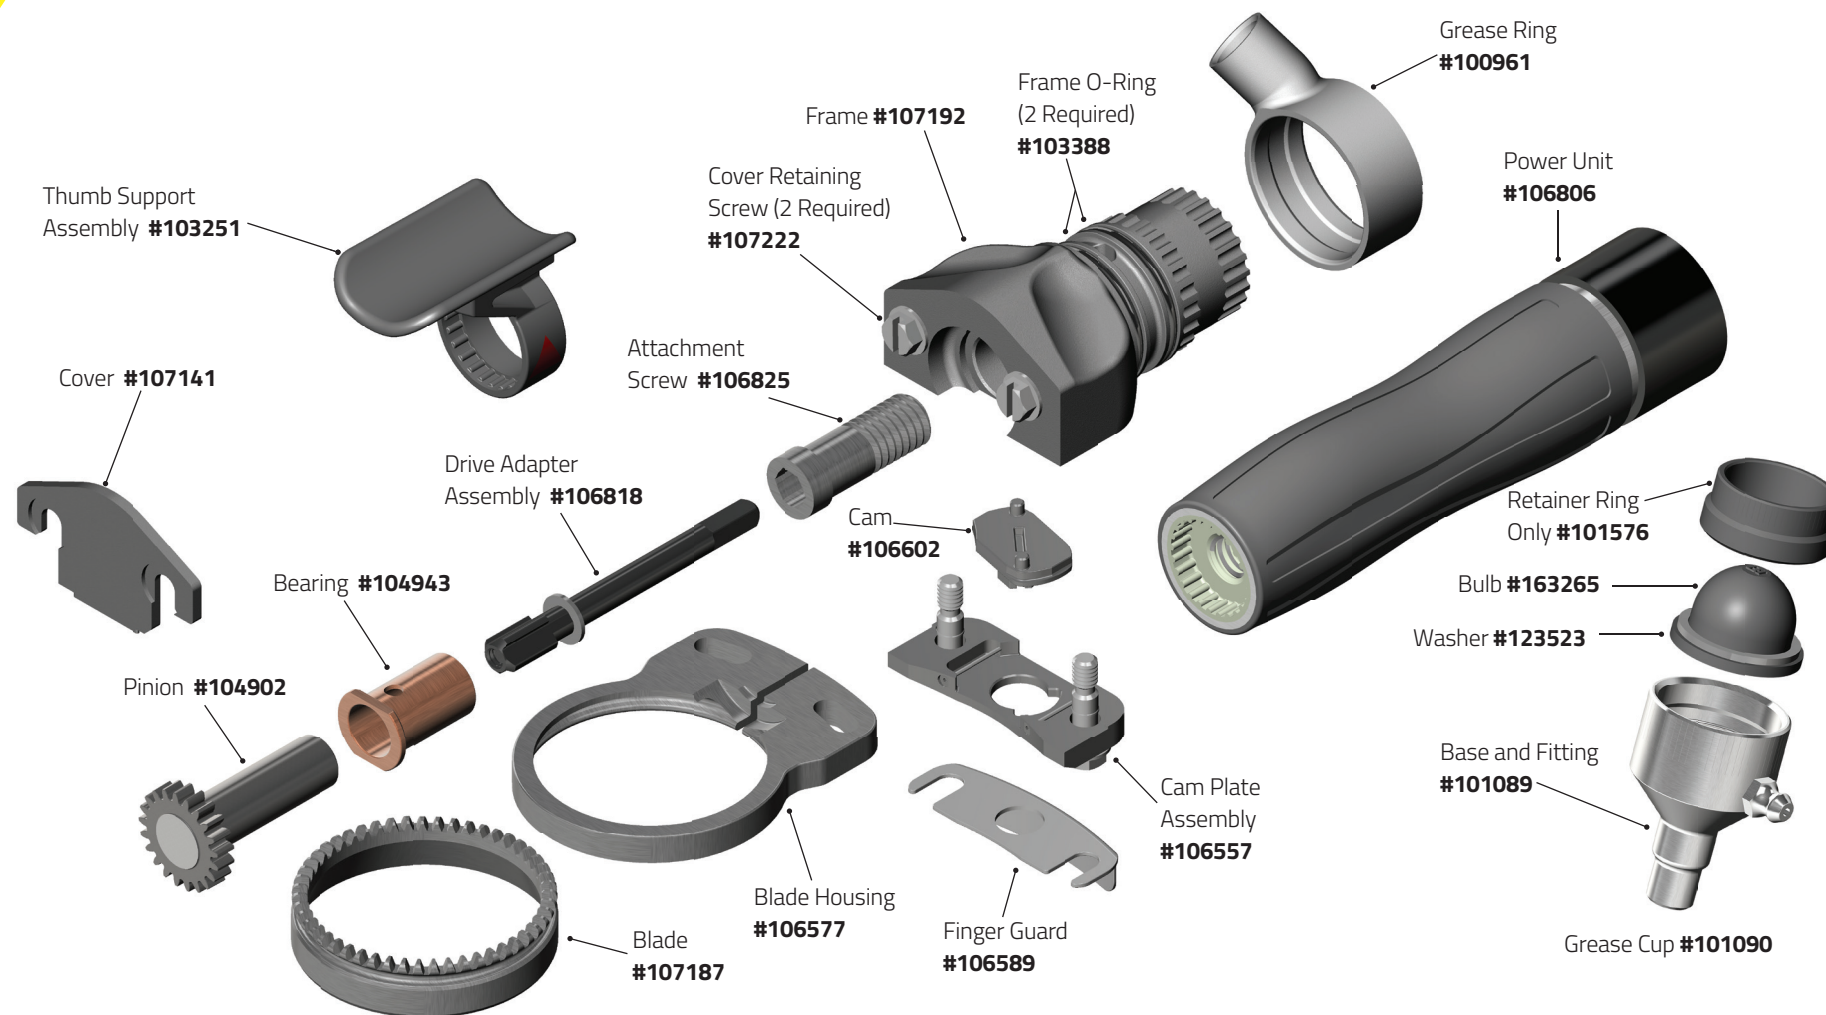




# Quantum Flex® Air X500/X505/ X500A

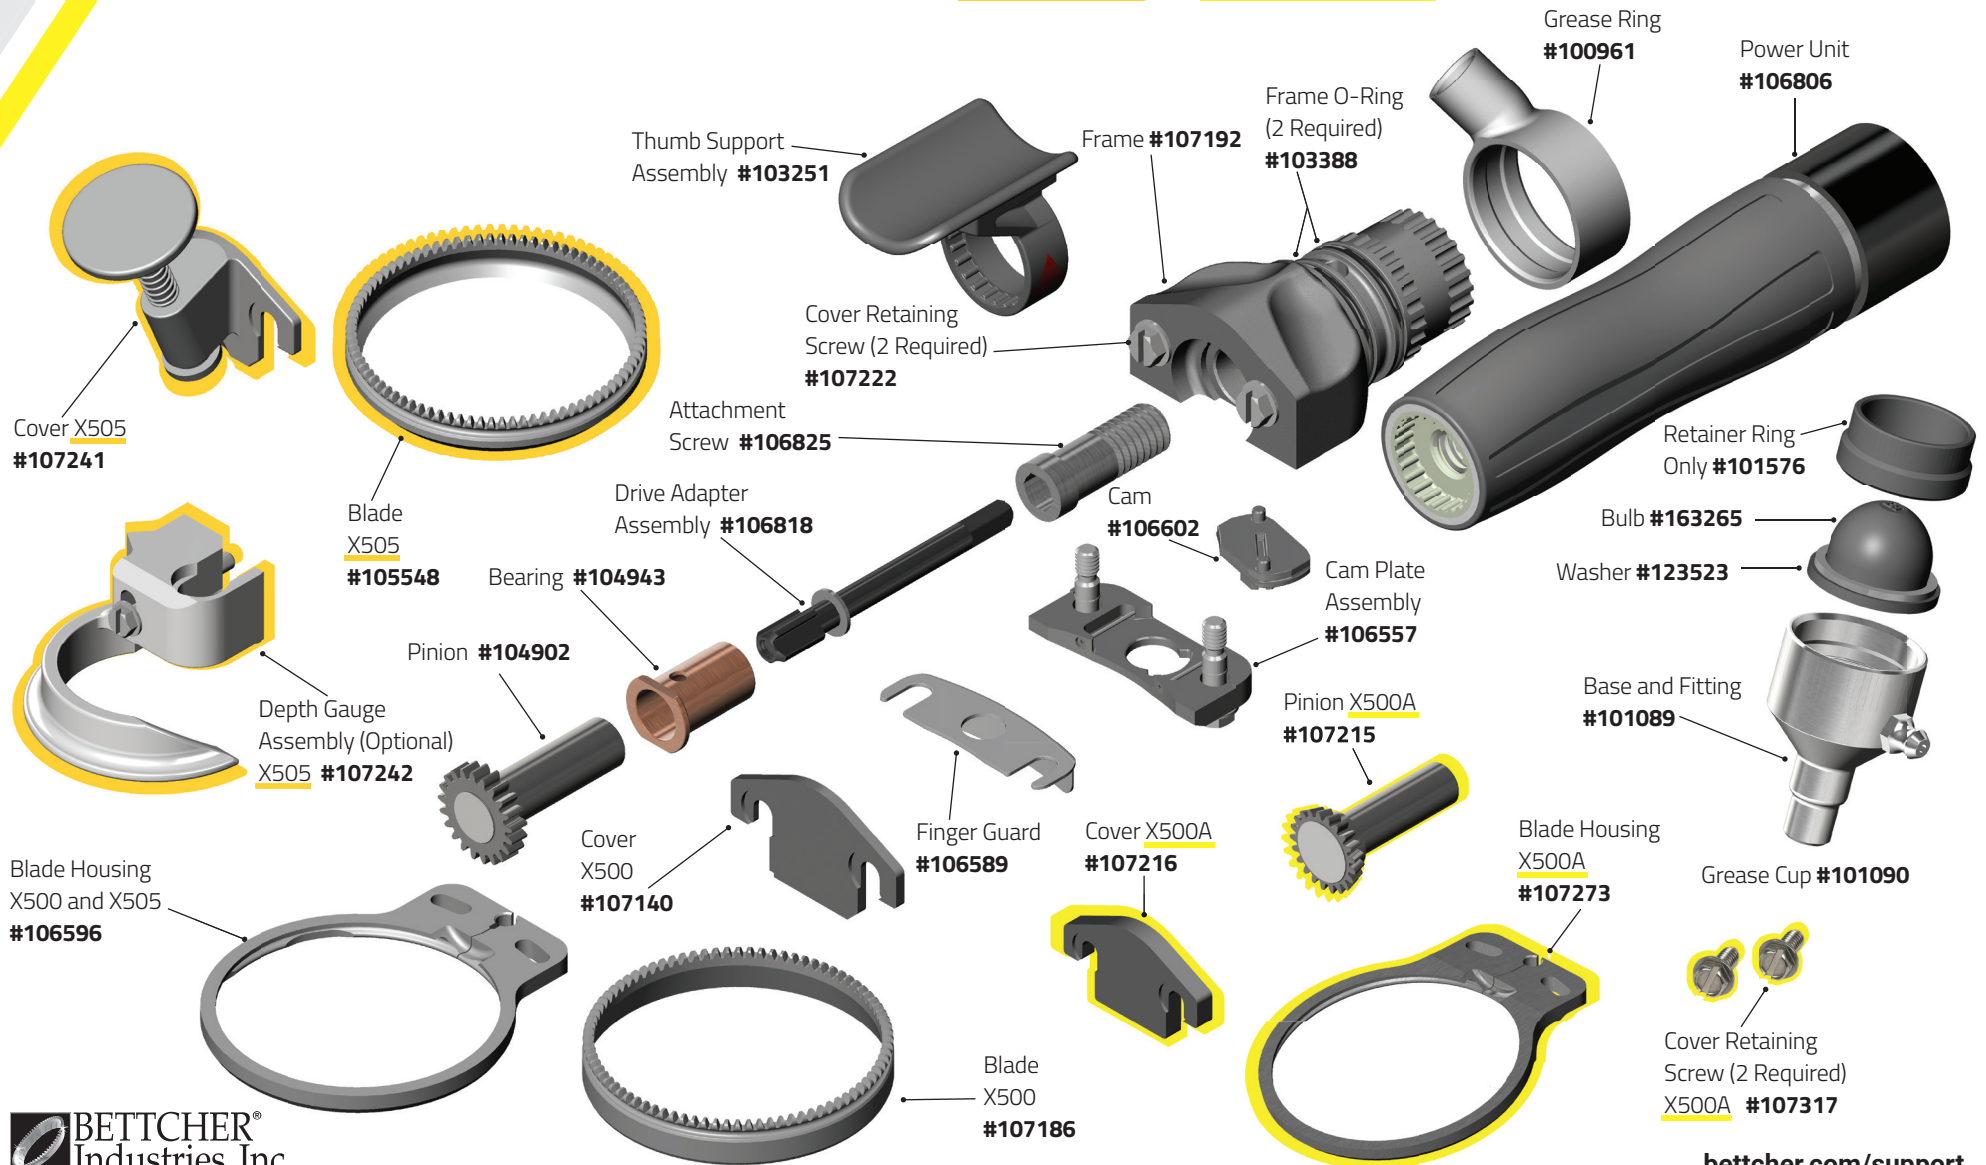

# Quantum Flex® Air X564

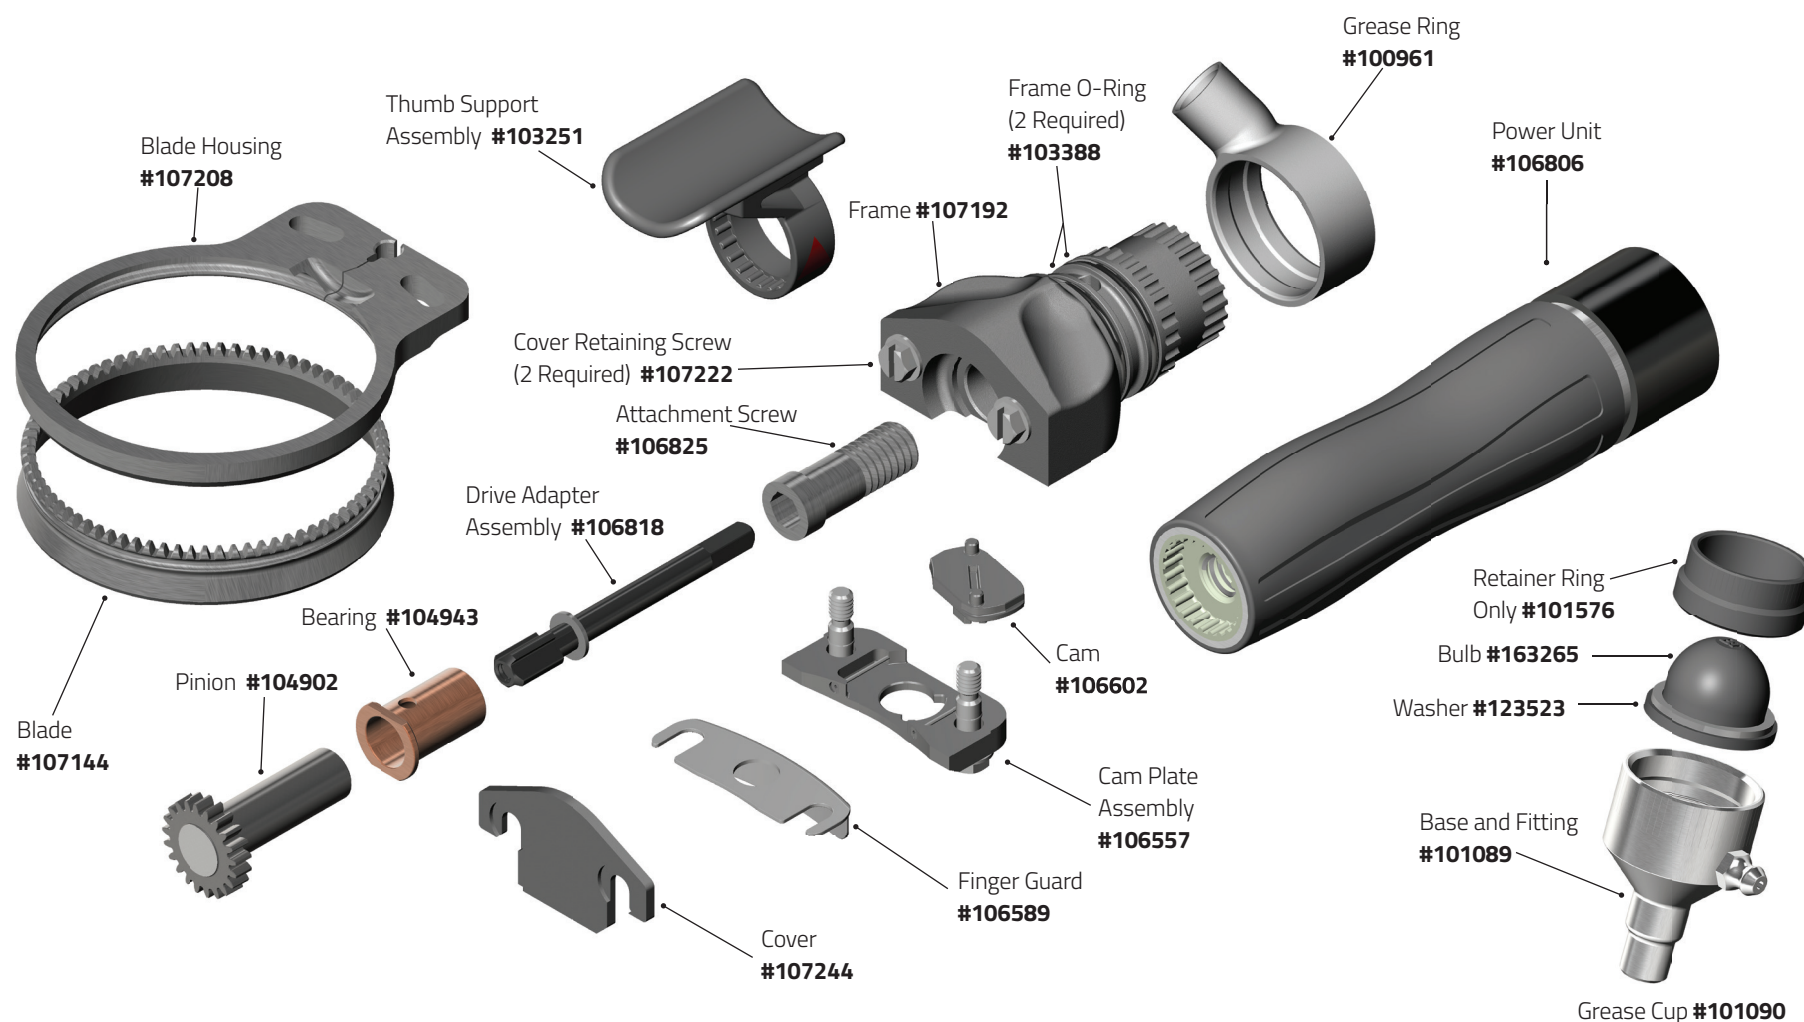




# Quantum Flex® Air X620/X625/ X620A






# Quantum Flex® Air X750

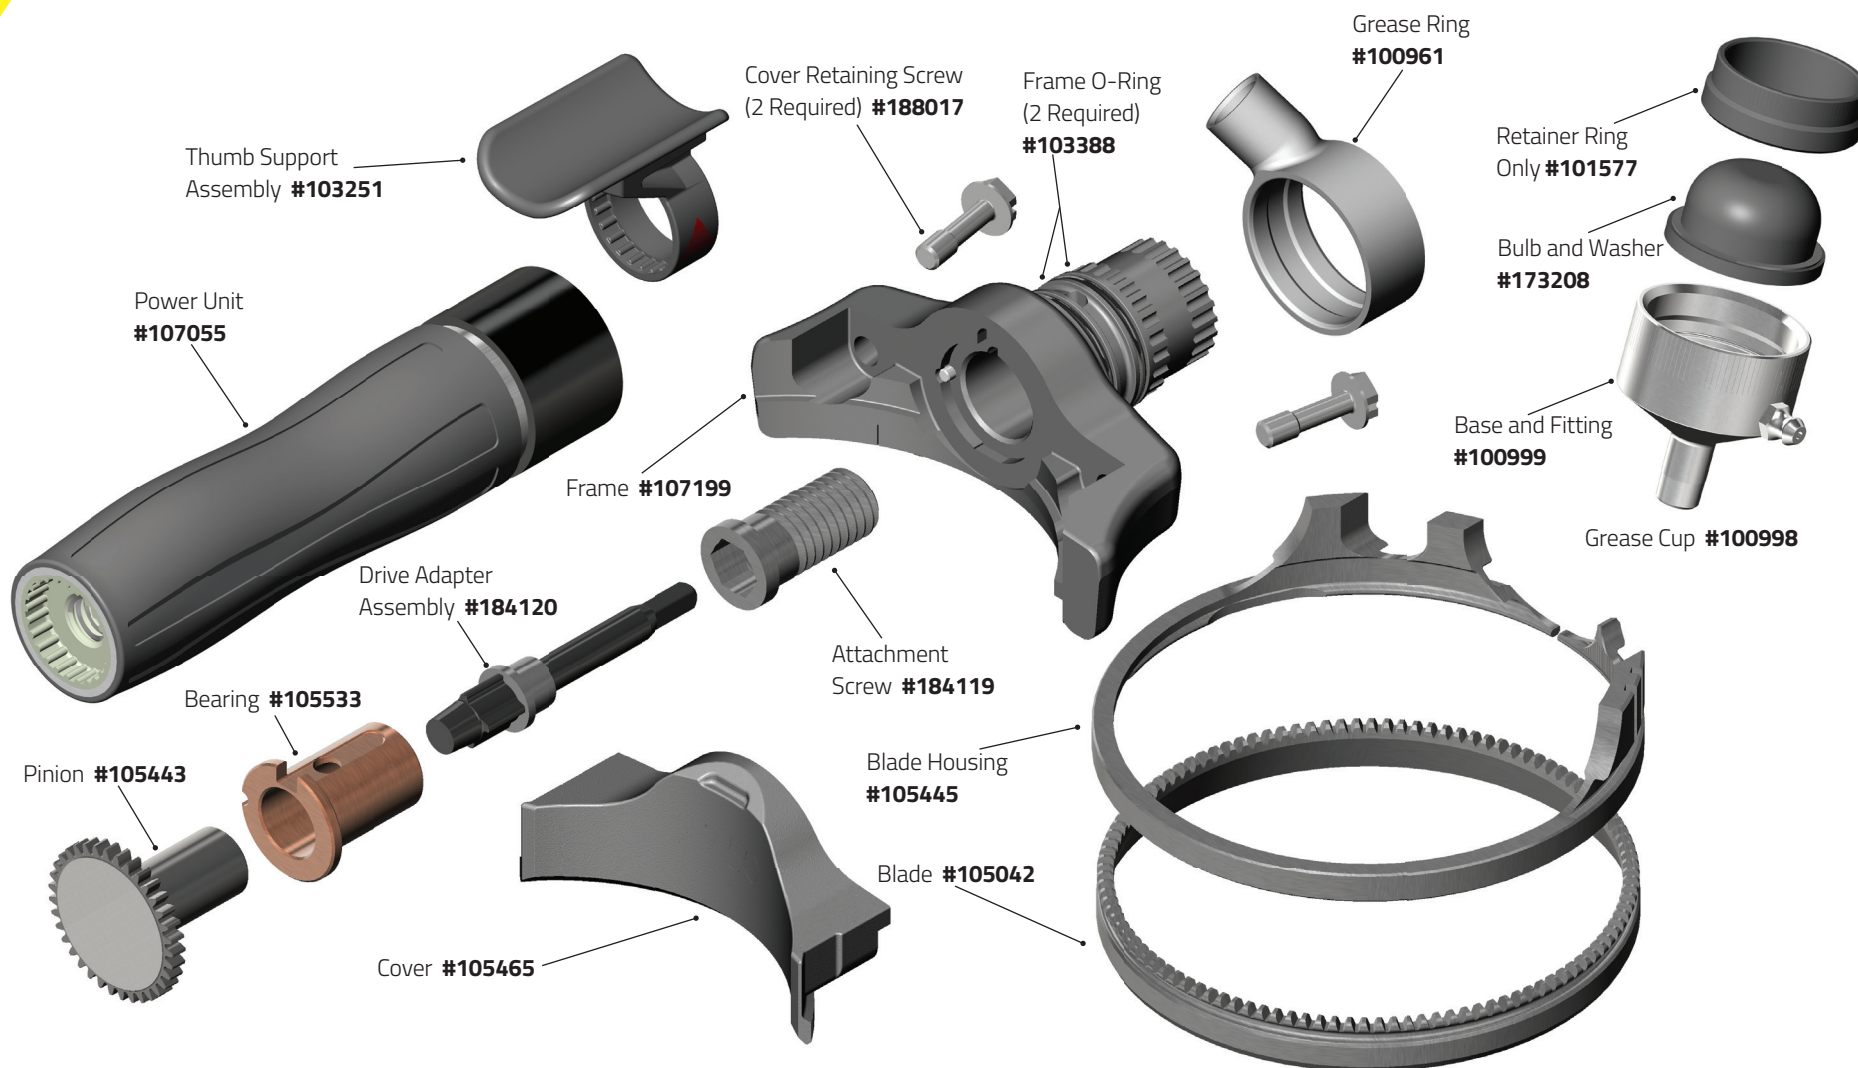




# Quantum Flex® Air X850/X880B & X880S

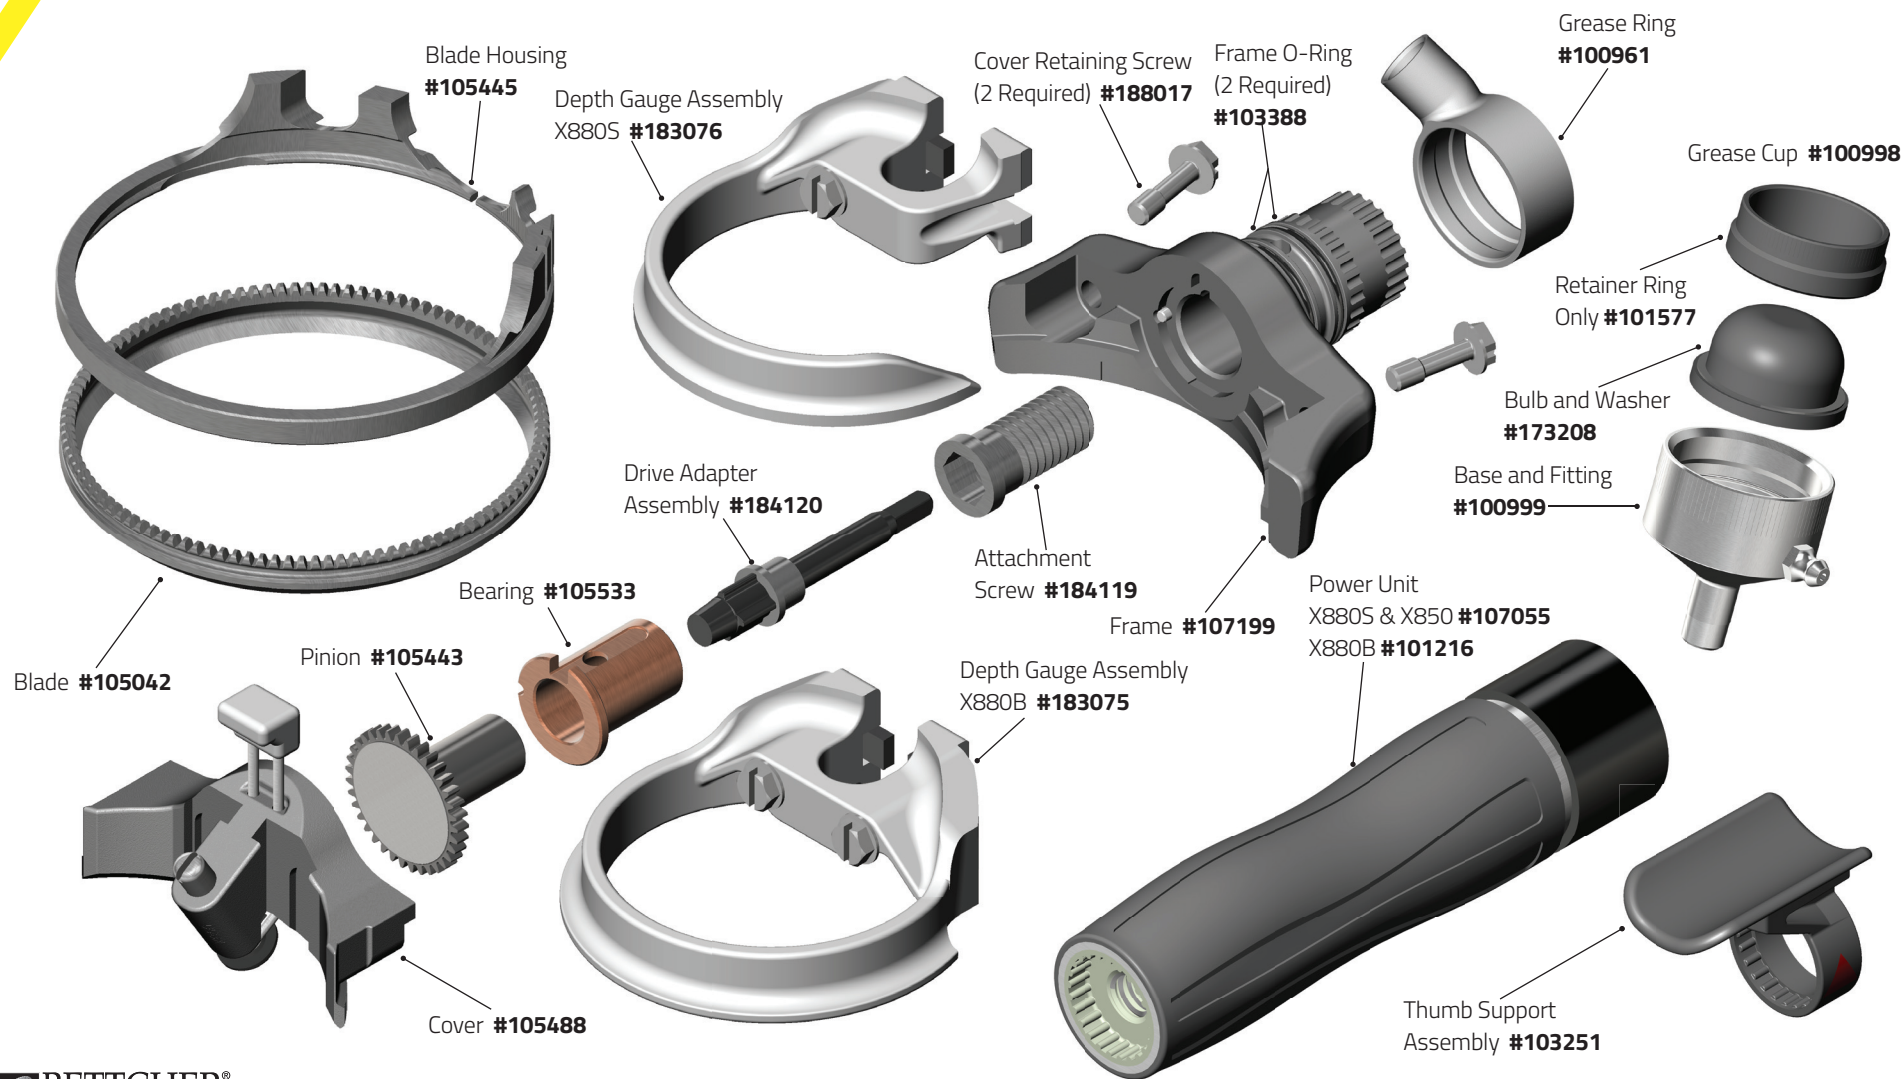




# Quantum Flex® Air X1000 & X1500

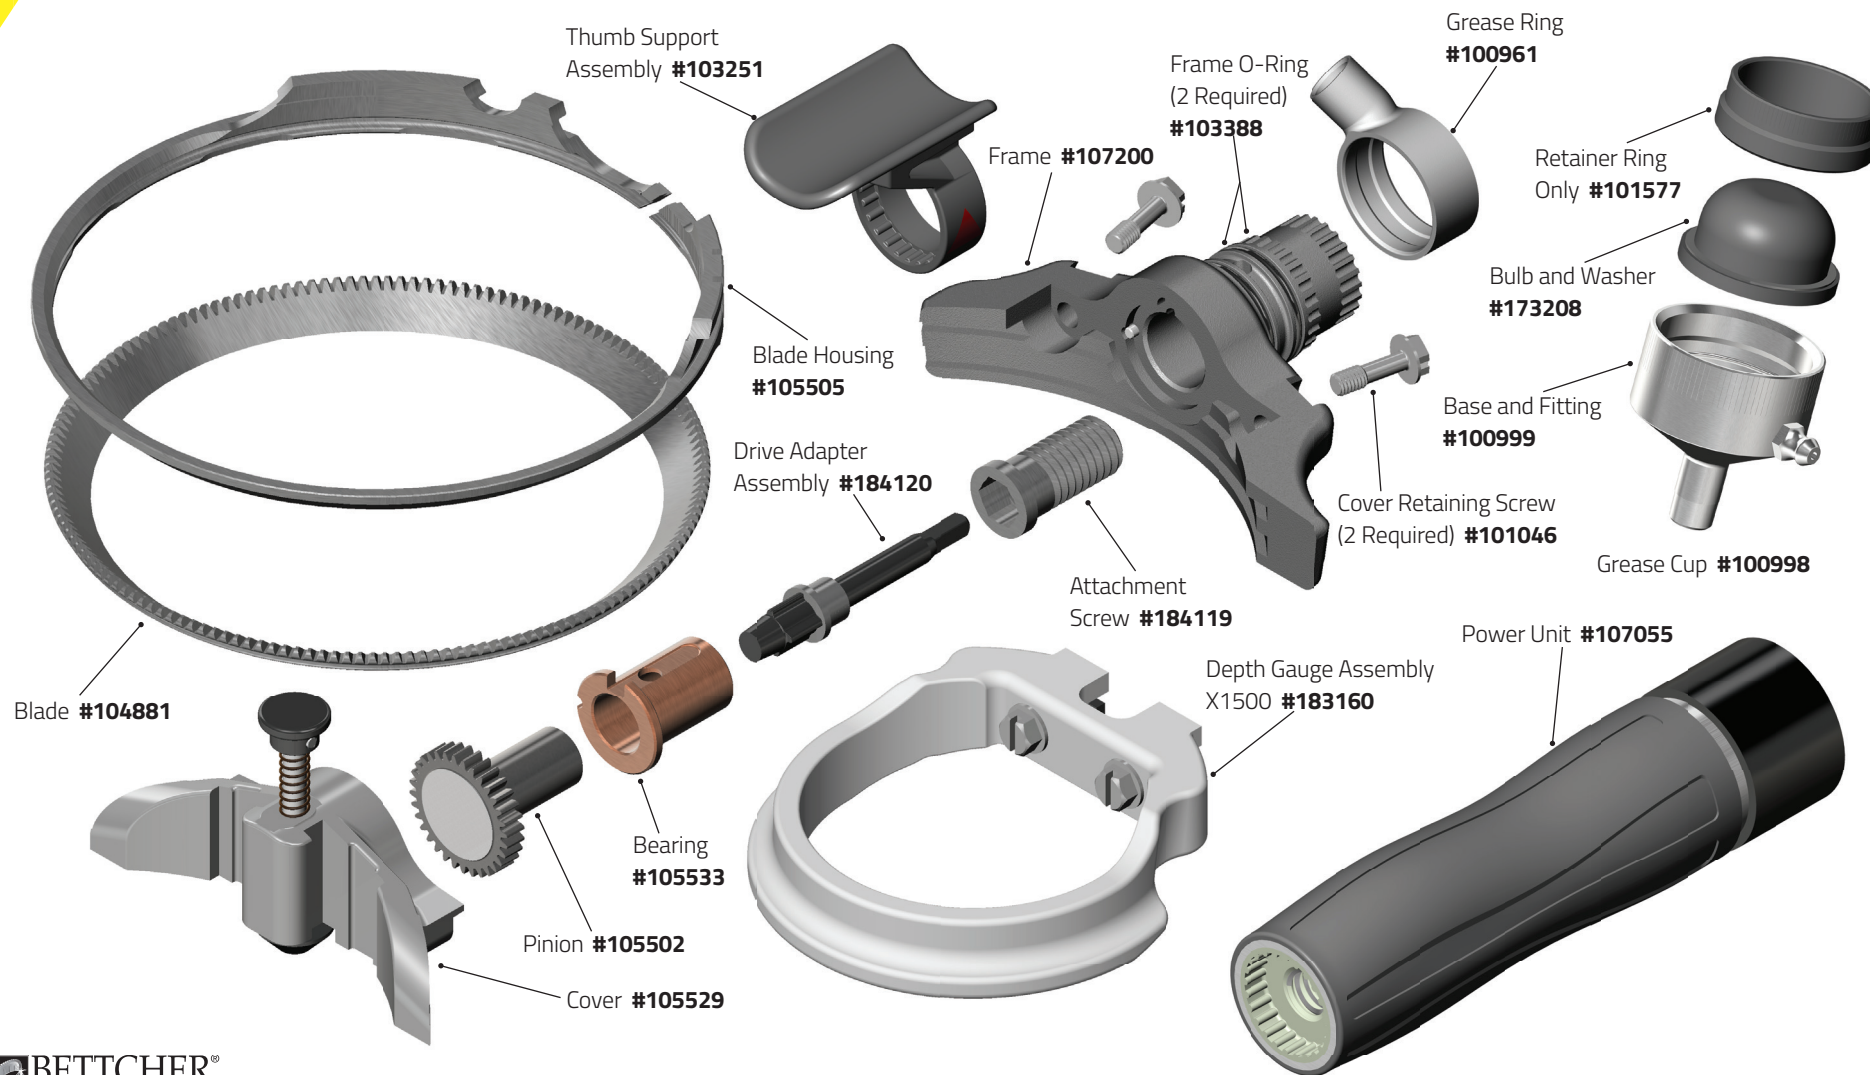




# Quantum Flex® Air X1300 & X1400

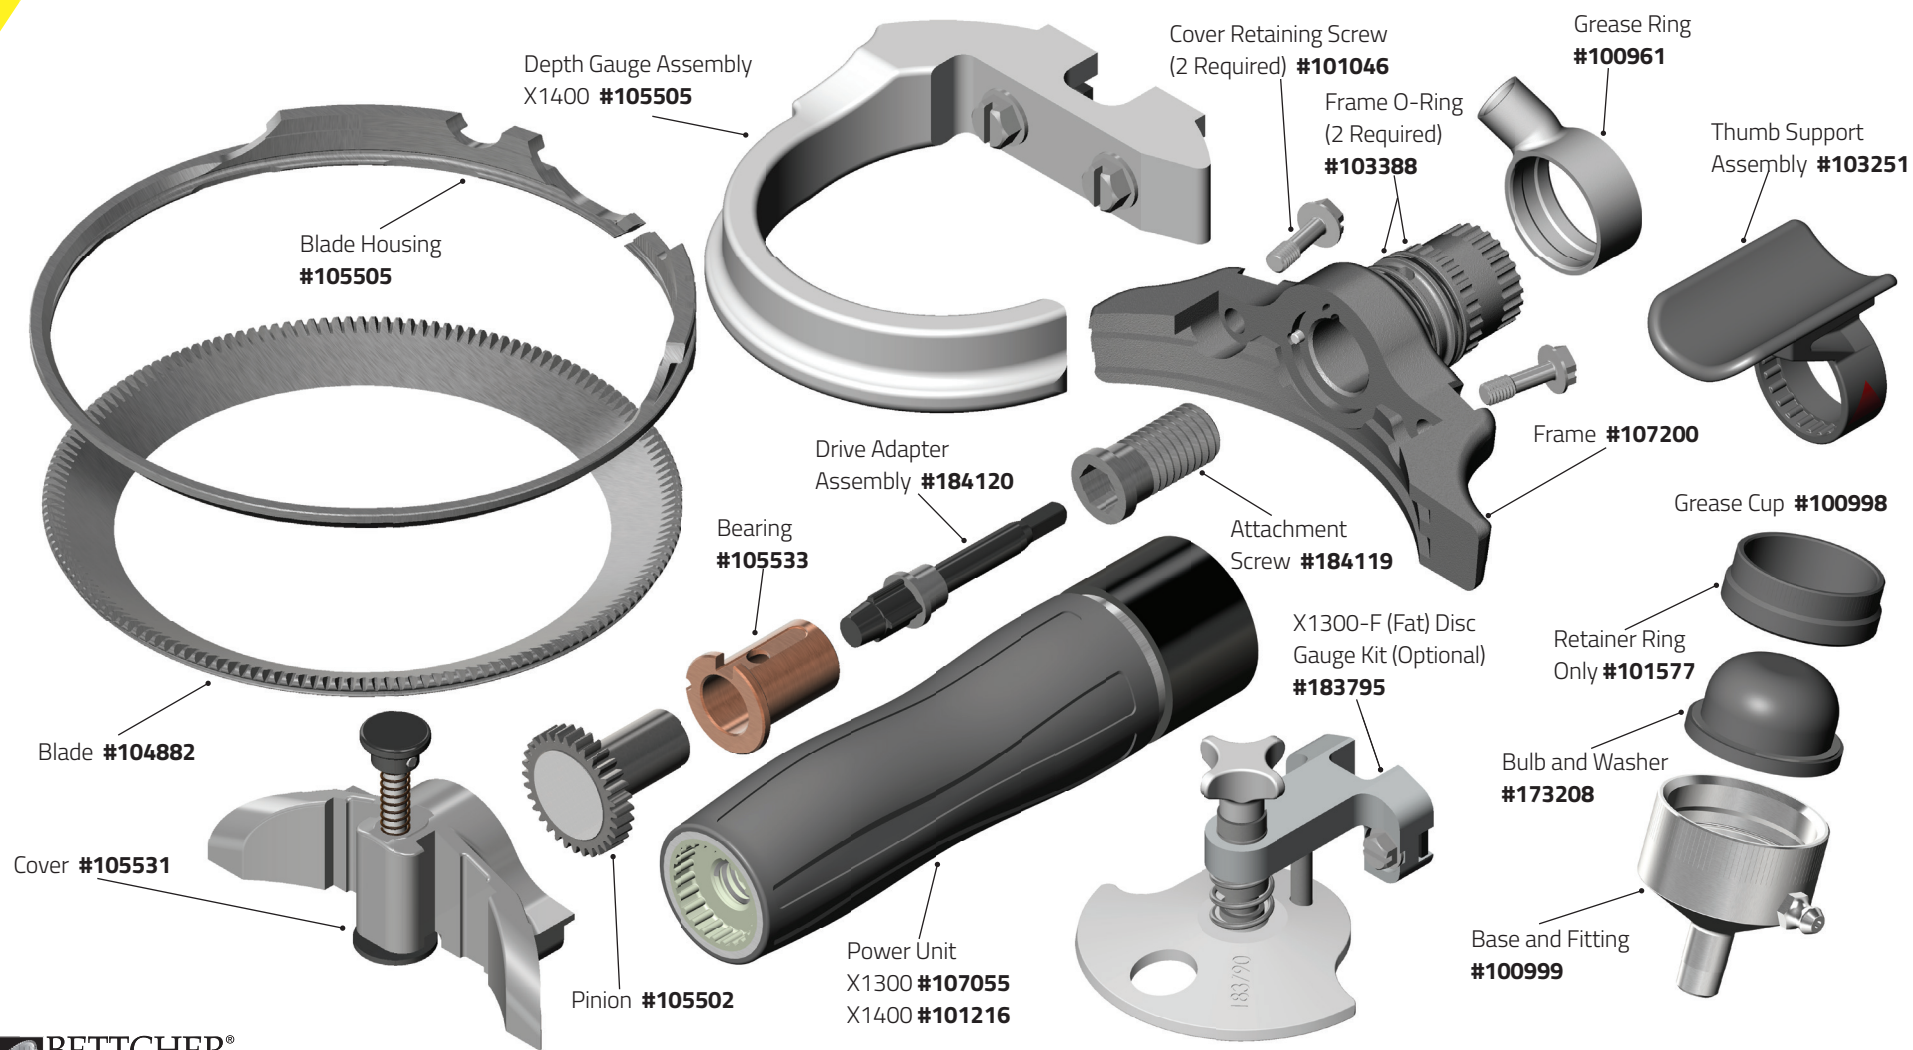




# Quantum Flex® Air X1850 & X1880

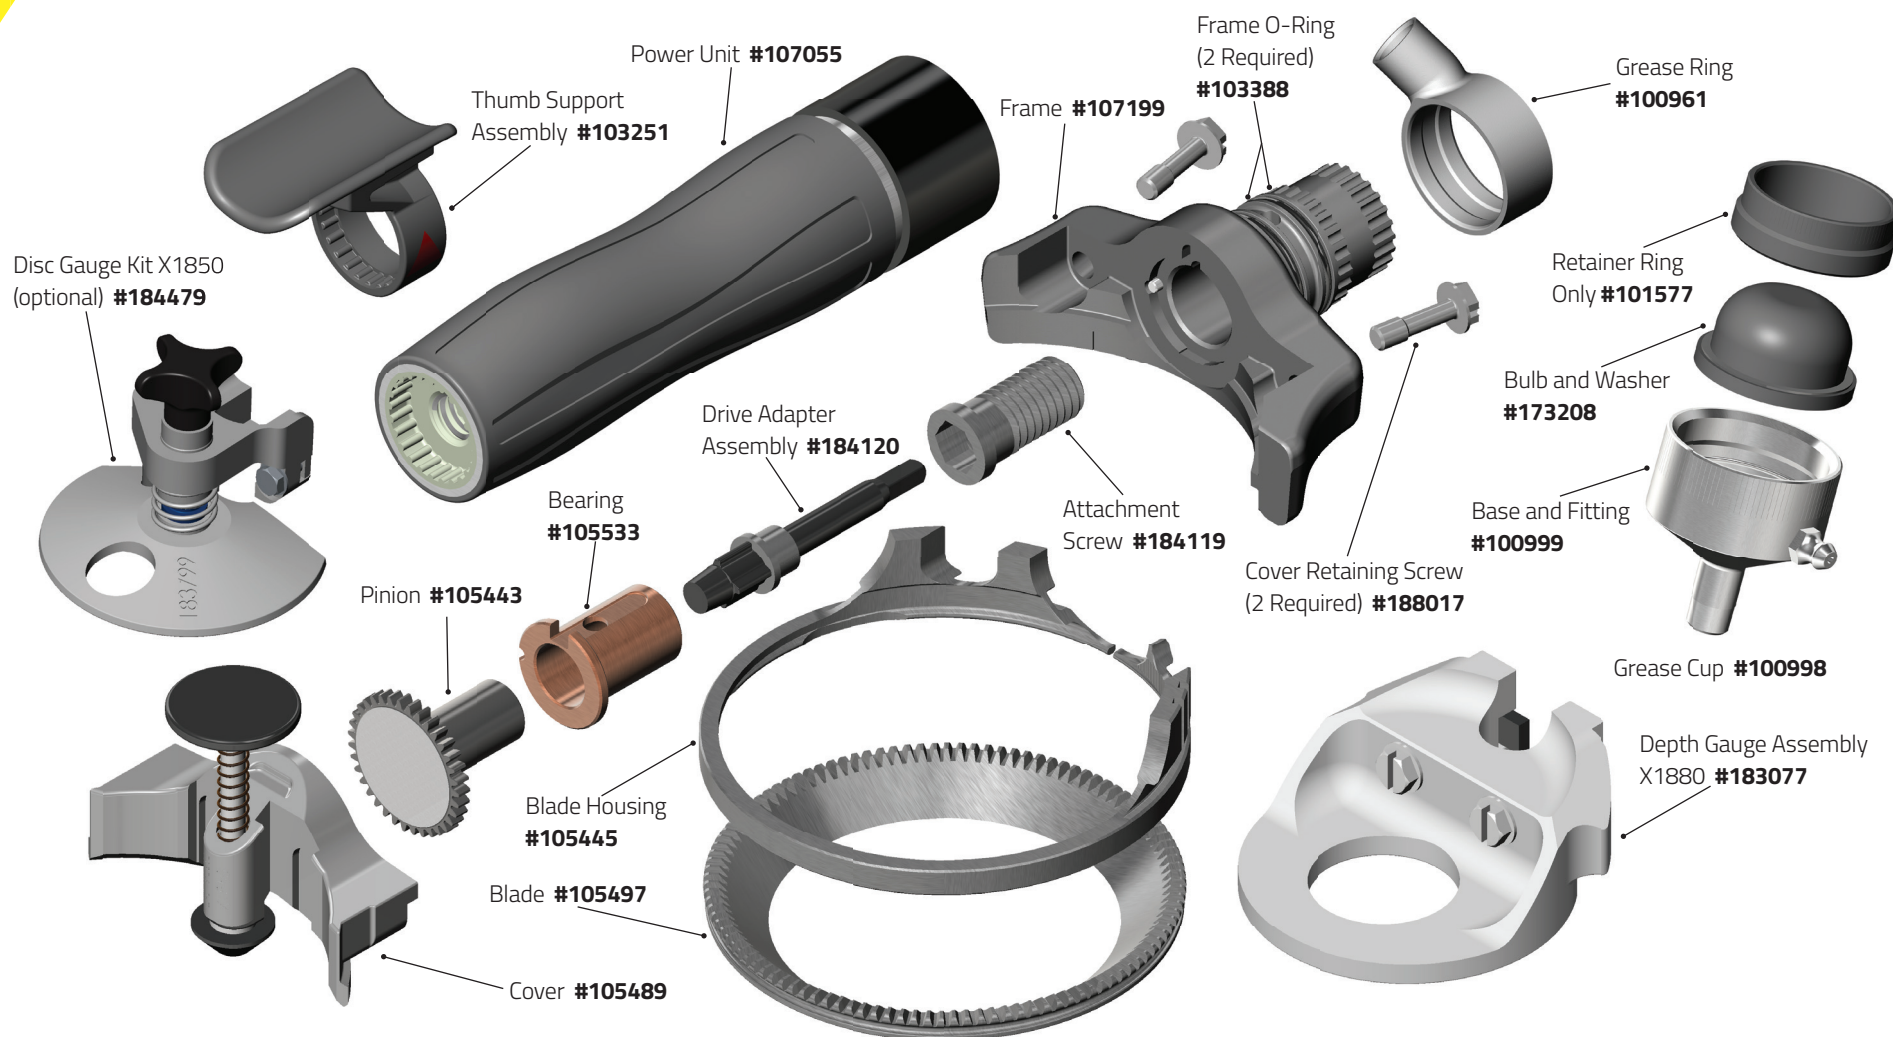


# Quantum Flex® Air Handle & Motor

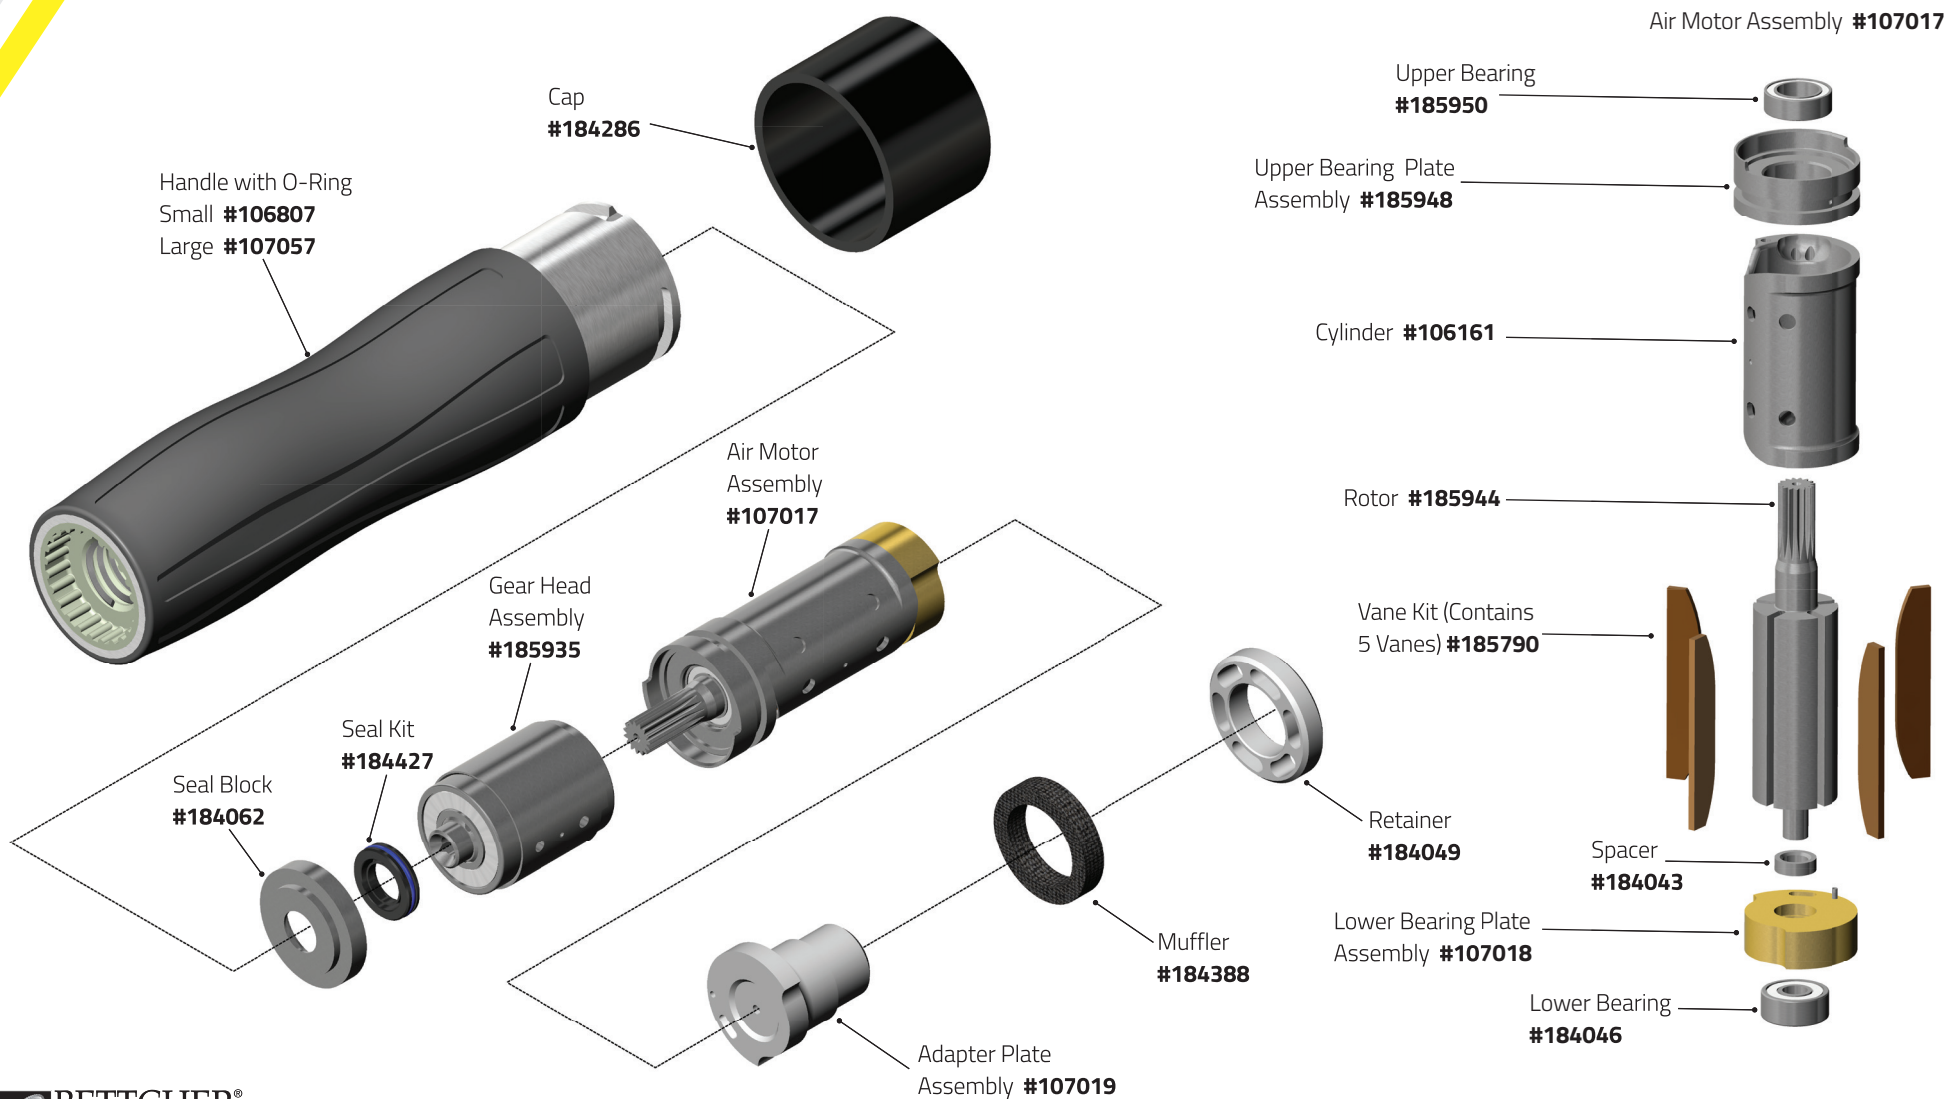





# Quantum Flex® Air Motor Maintenance Kit

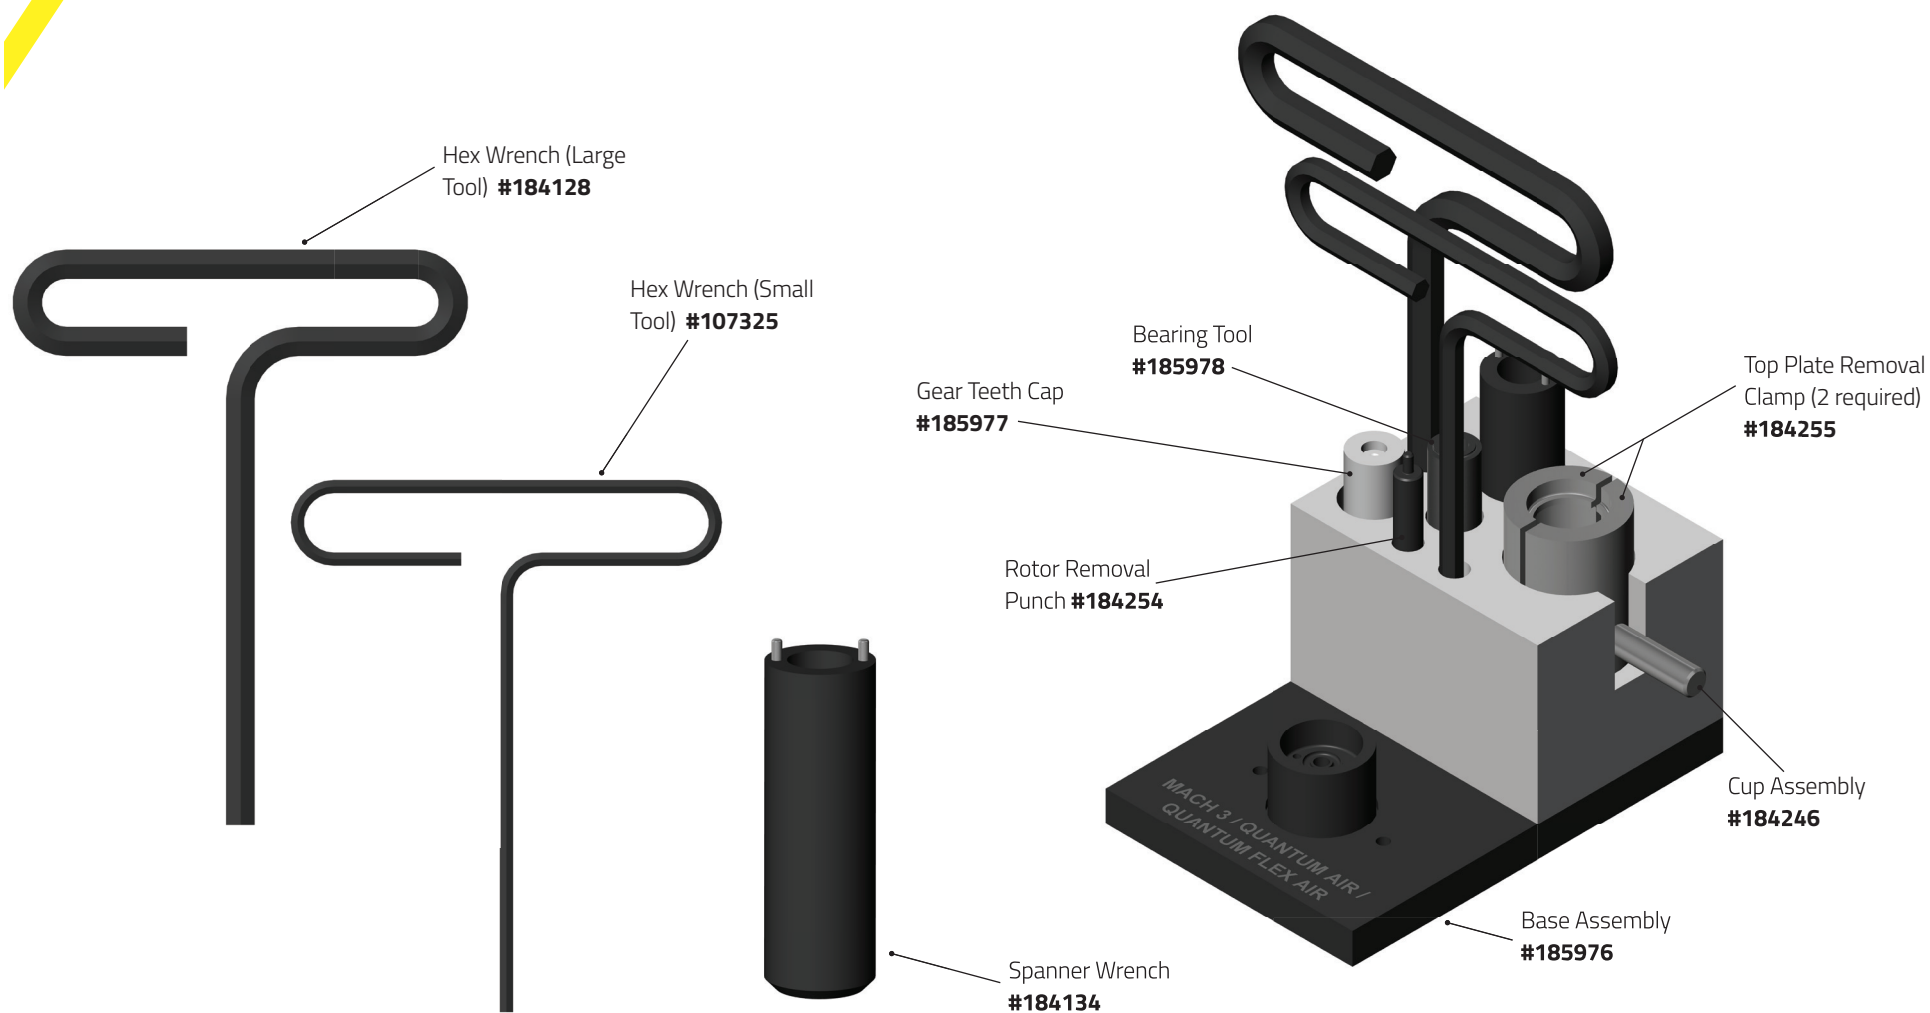



# Quantum Flex® Air Parts & Accessories

## Optional and Replacements Parts

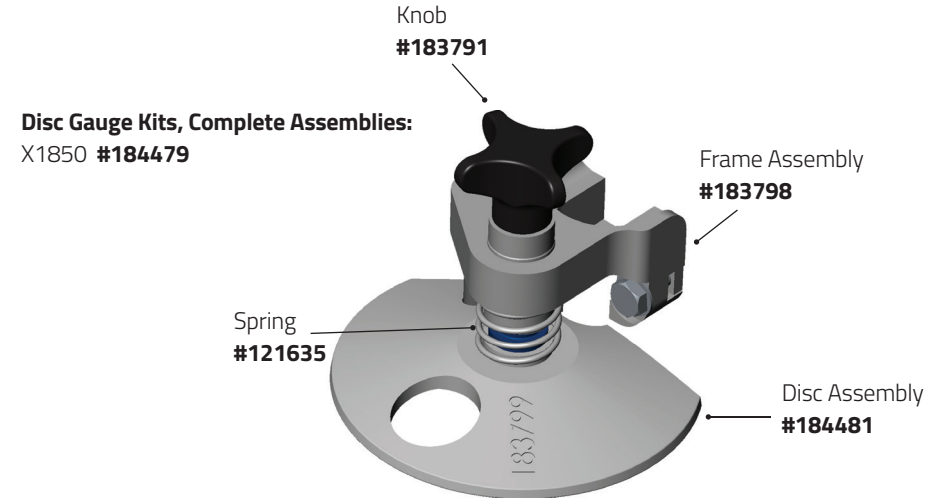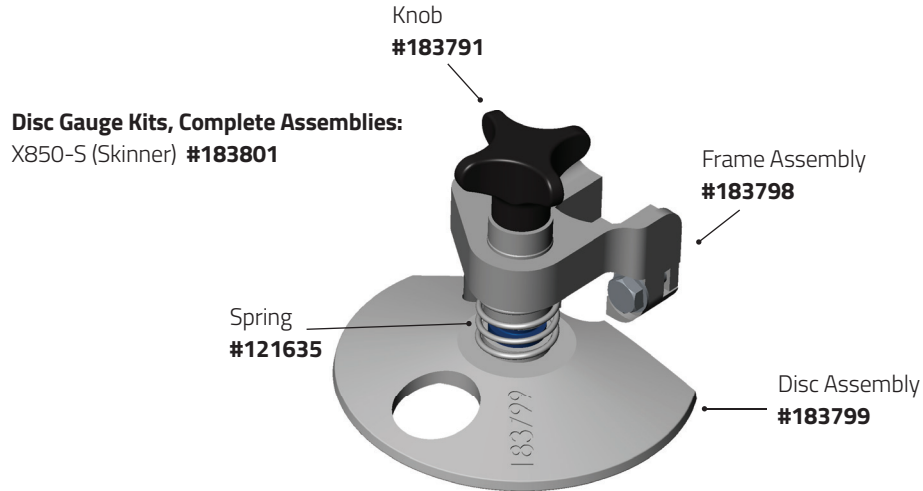


# Quantum Flex® Air Parts & Accessories

## Optional and Replacements Parts

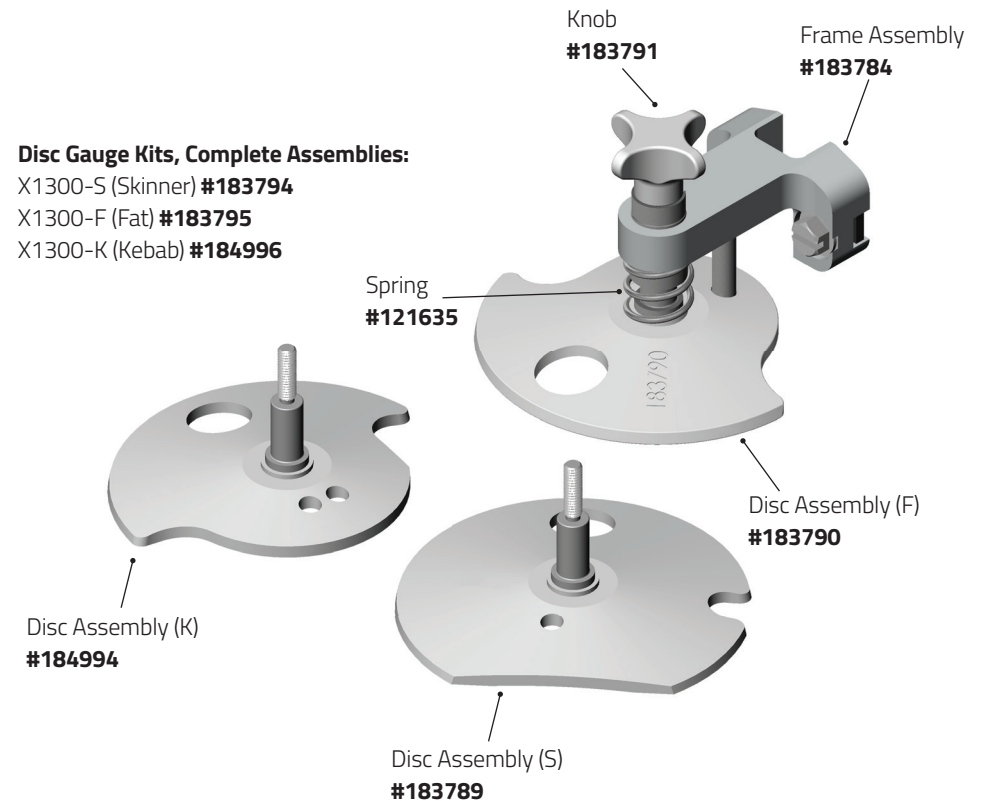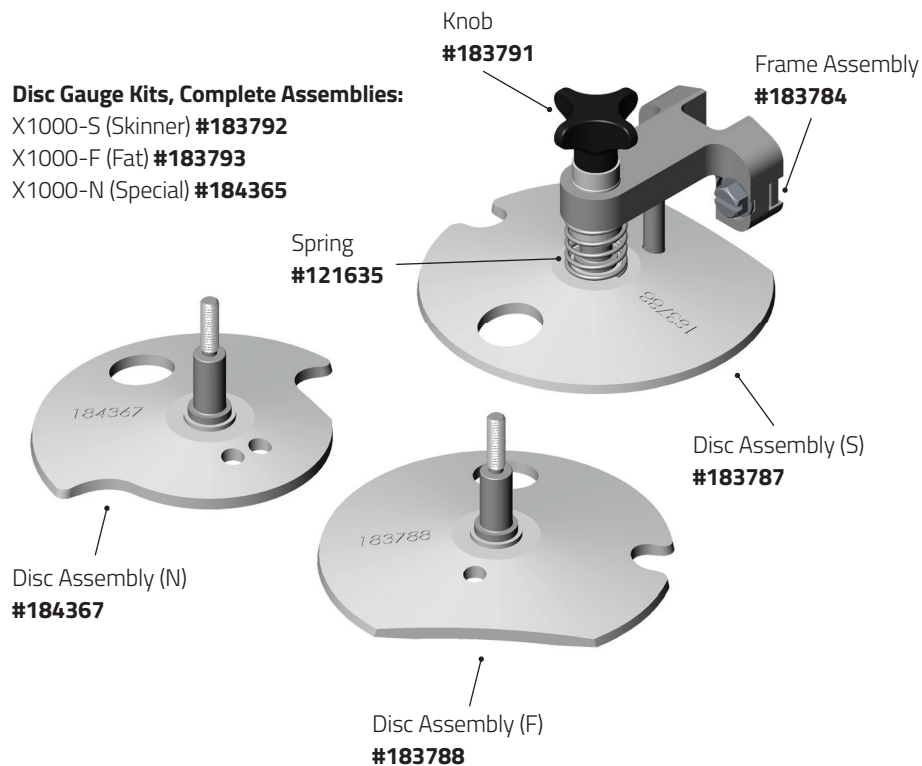


# Quantum Flex® TrimVac® 18 Head Assembly

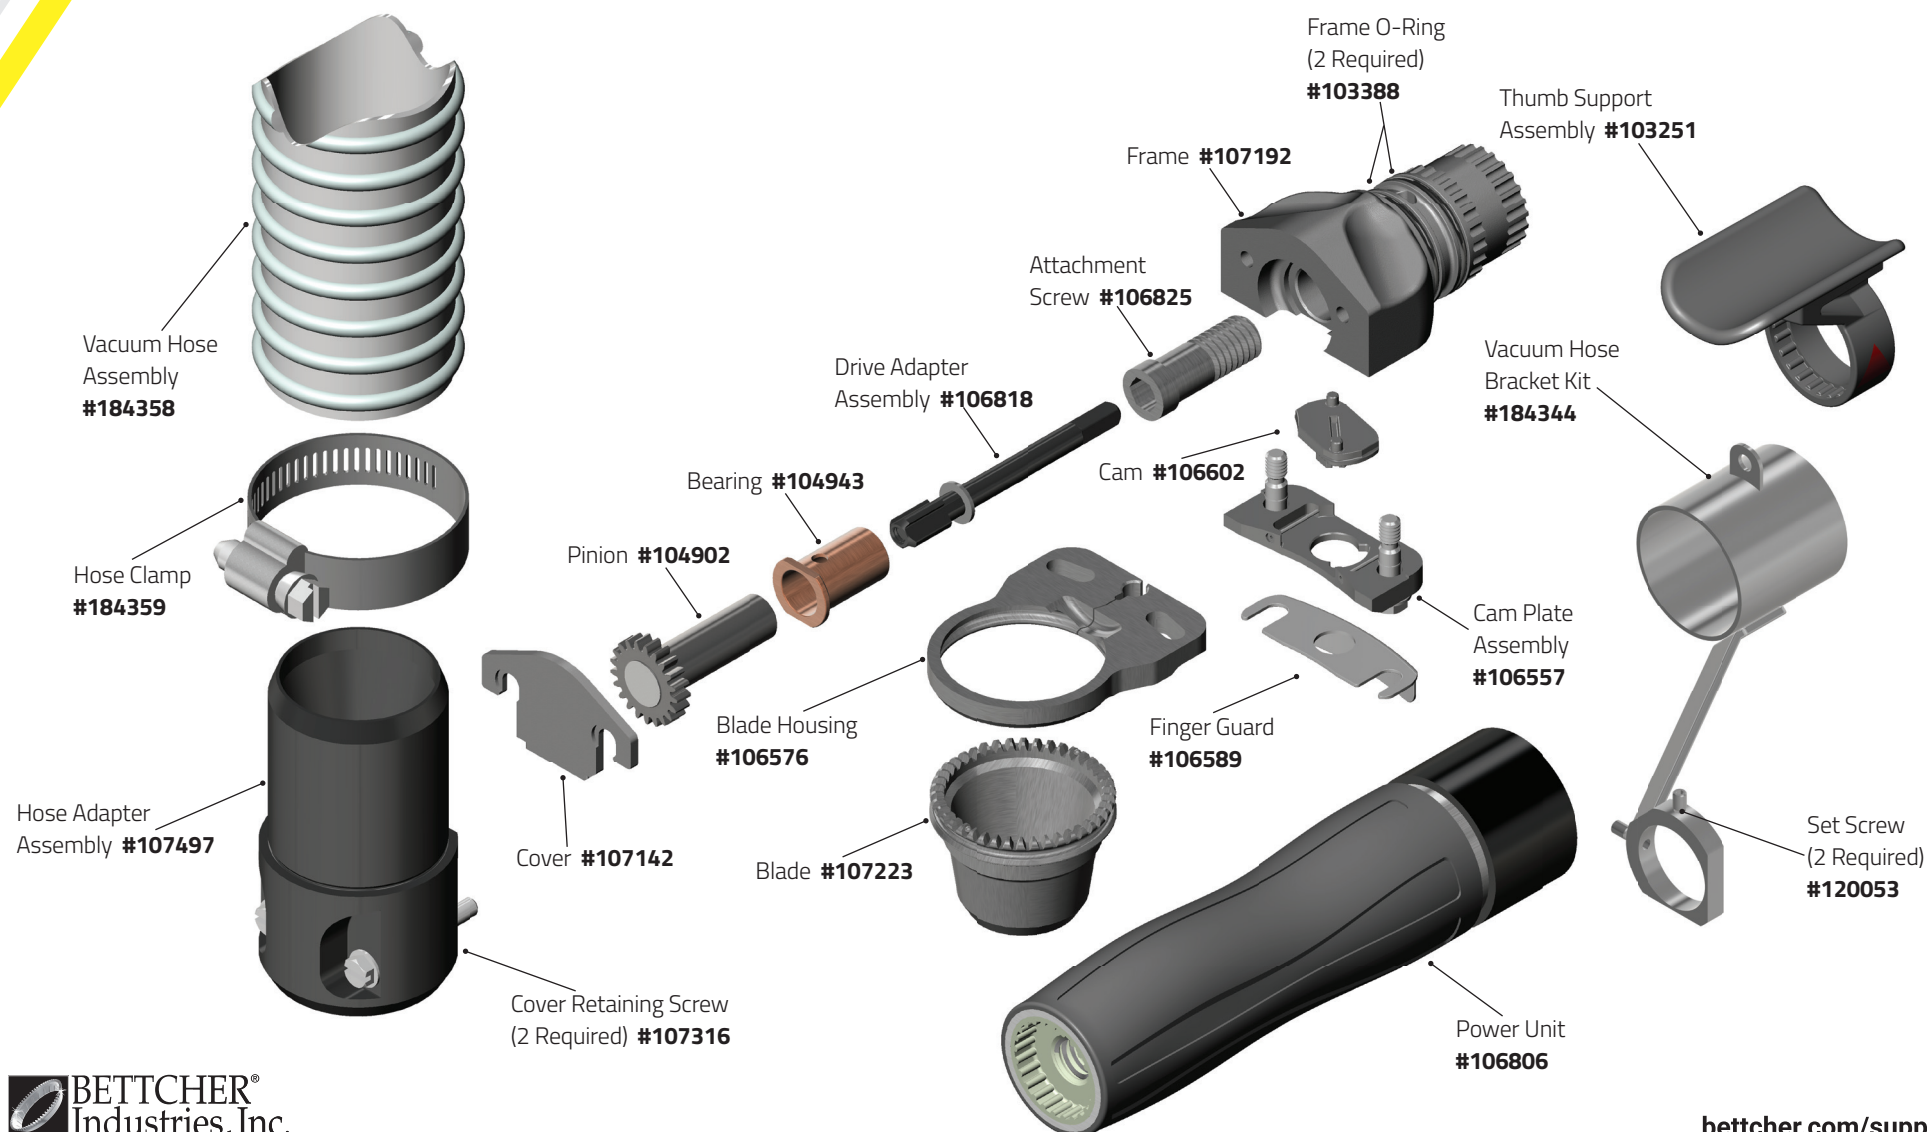




# Quantum Flex® TrimVac® 45 Head Assembly

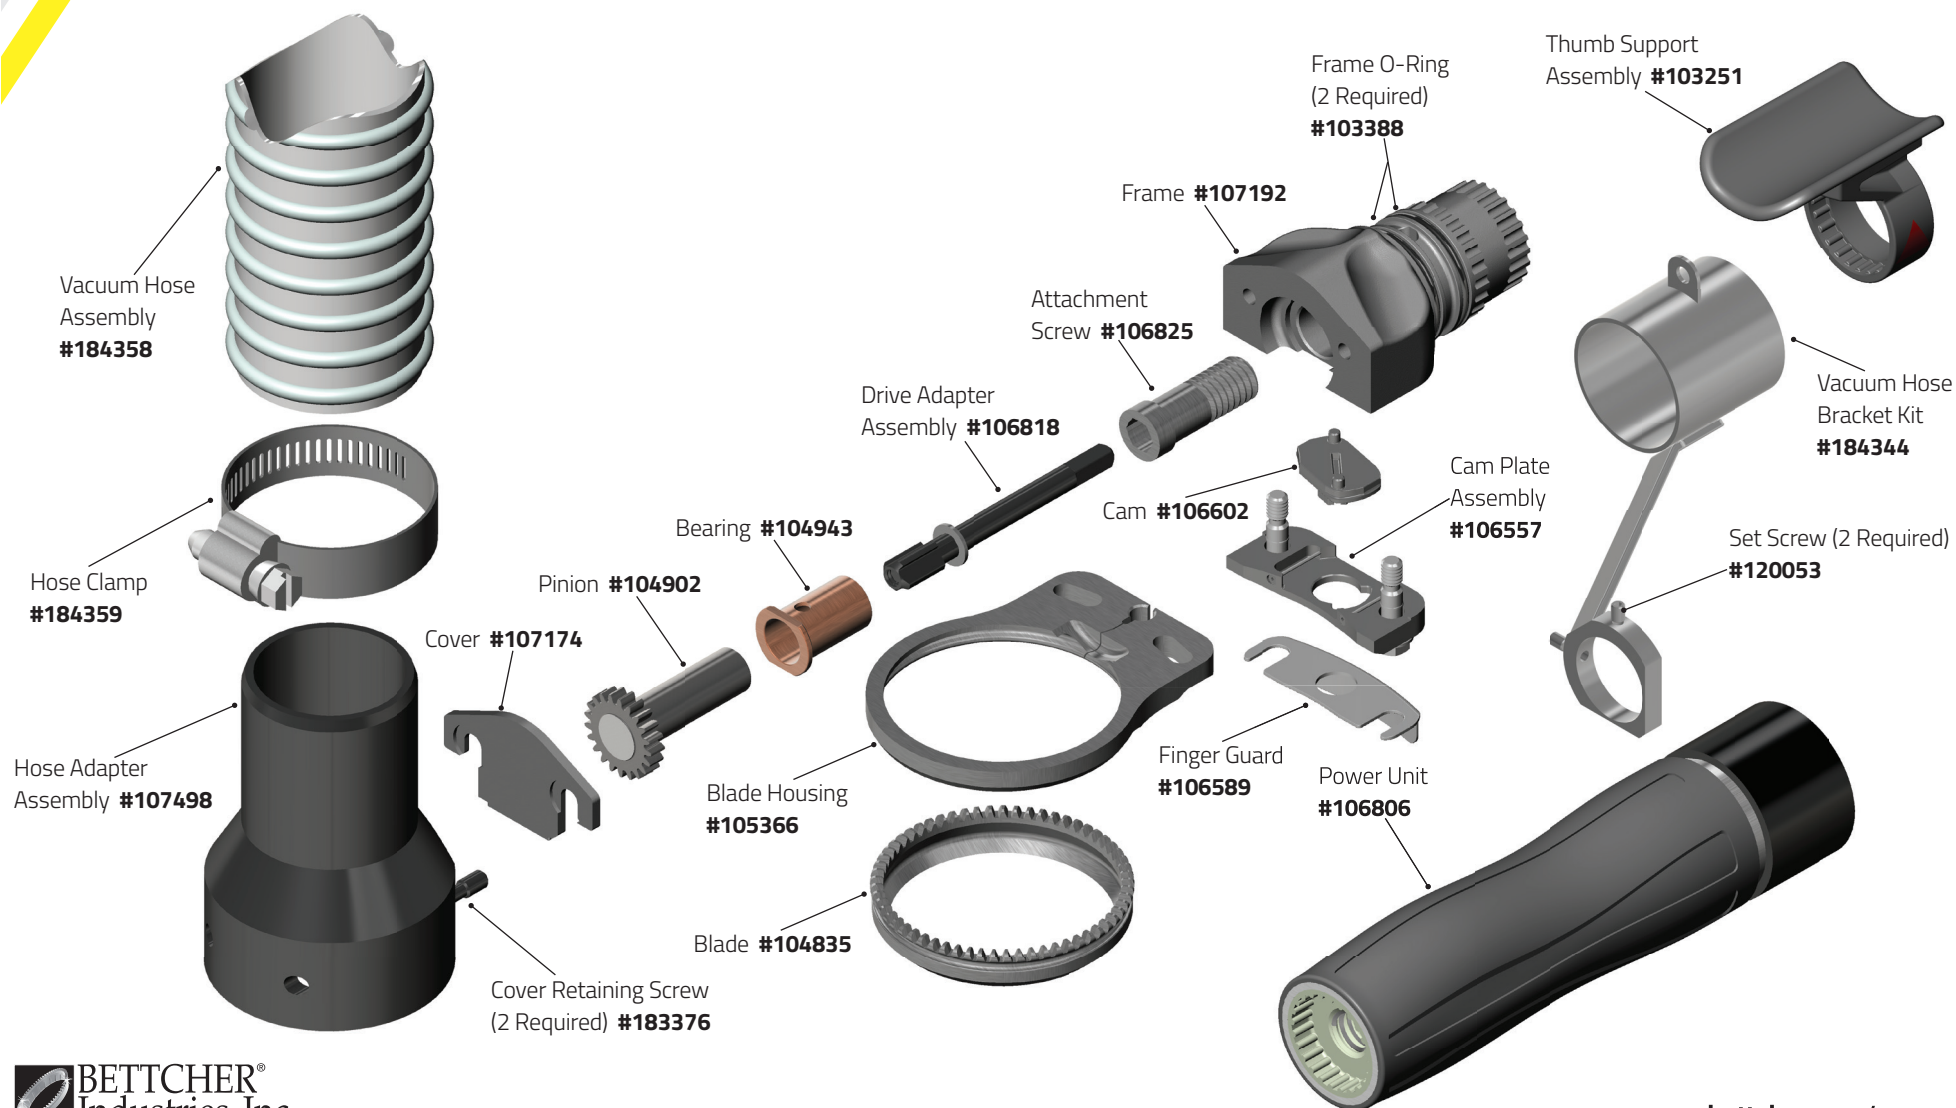



# Valve and Hose Assembly

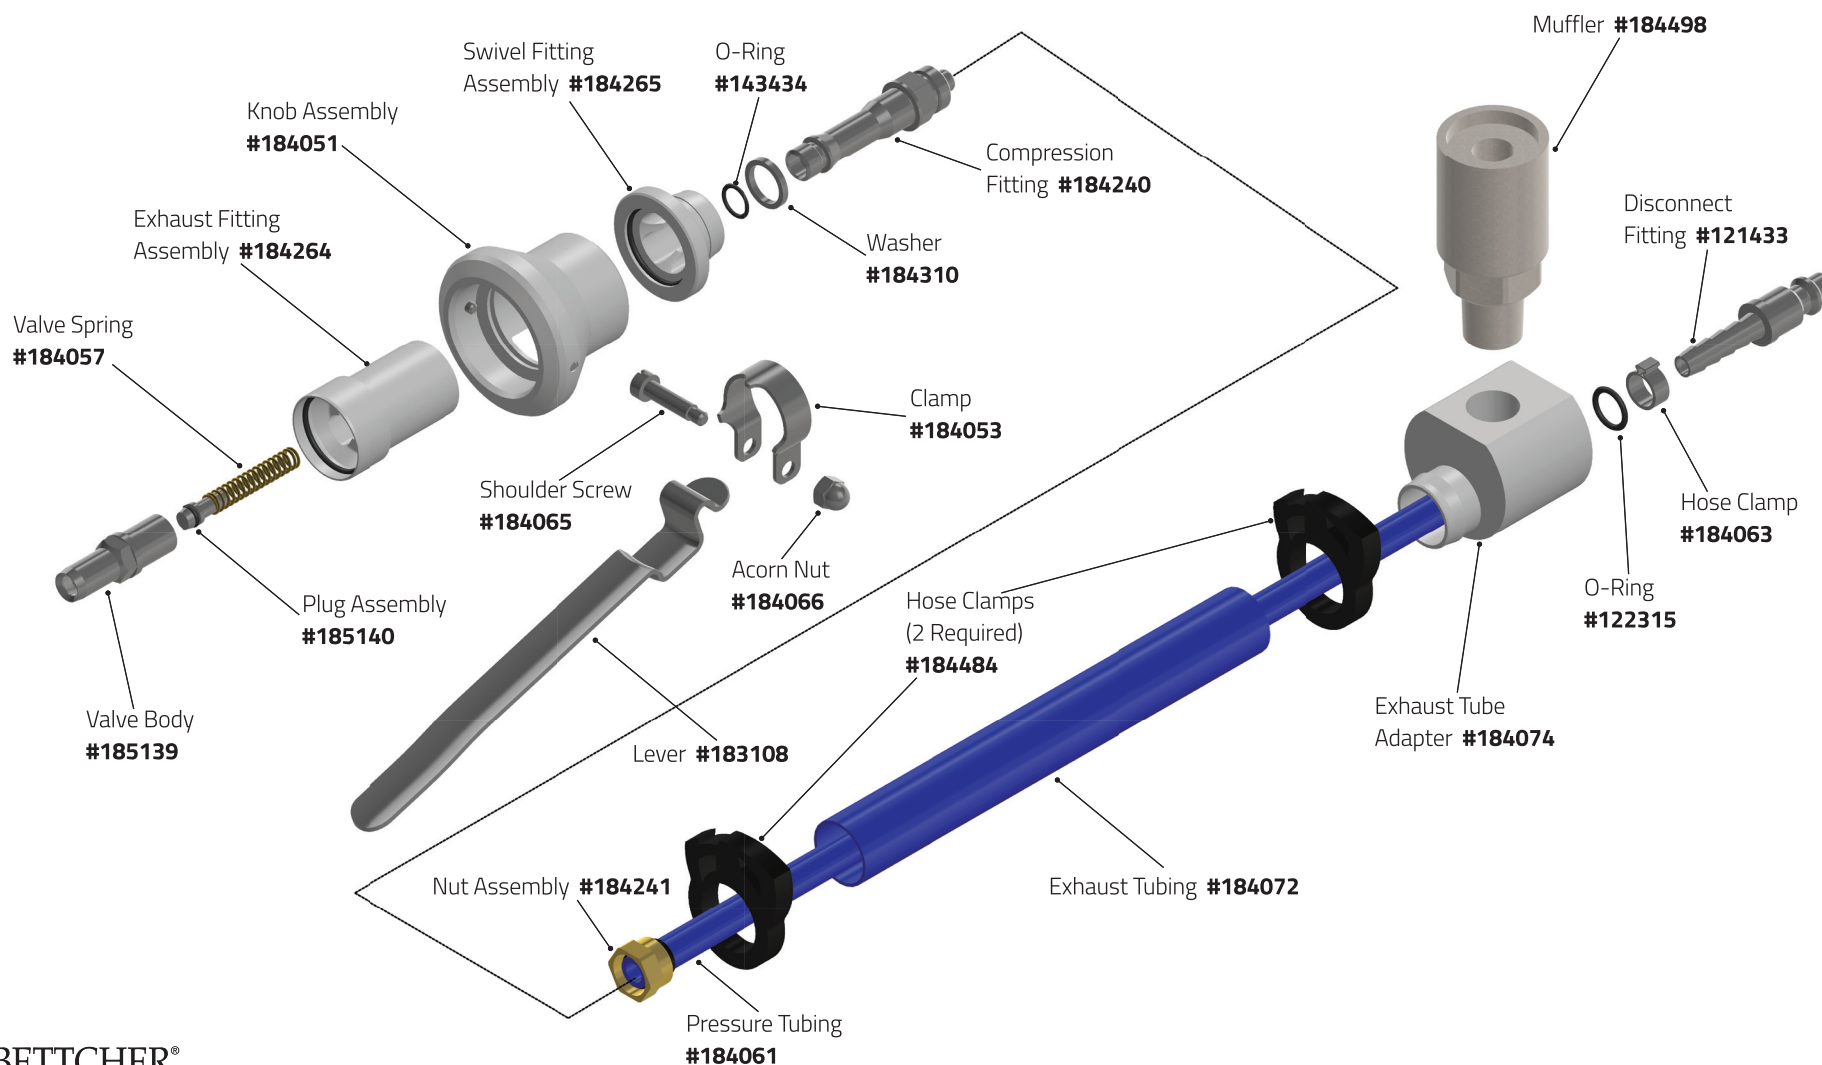



# Quick Start Valve and Hose Assembly

