

How to Order Whizard® Series II Casings

Casings for Whizard® Trimmers may be ordered *with* or *without* the driver assembly. The driver assembly is easily removed with an adjustable wrench and fitted onto a new casing. When Series II trimmers were introduced, the casings were shortened slightly, because the UltraDrive™ Motor hangs lower. Here's how to measure casing lengths:

Actual Casing Measurement

48" Casing = 46 5/8" [118.4 cm]

60" Casing = 58 5/8" [149 cm]


84" Casing = 81 7/8" [208 cm]

(measure from red arrow to red arrow)



	Series II DuraFlex Casings	Casing Only	Non-Disconnect Assembly <i>Includes Driver Assy</i>	Disconnect Assembly <i>Includes Driver Assy</i>
0.250" Flexshaft Diameter	48" Series II DuraFlex	183771	183849	183852
	60" Series II DuraFlex	183772	183850	183853
	84" Series II DuraFlex	183773	183851	183854

	Series II DuraLite™ Casings	Casing Only	Non-Disconnect Assembly <i>Includes Driver Assy</i>	Disconnect Assembly <i>Includes Driver Assy</i>
0.187" Flexshaft Diameter	48" Series II DuraLite™	183491	183856	183859
	60" Series II DuraLite™	183492	183857	183860
	84" Series II DuraLite™	183493	183858	183861

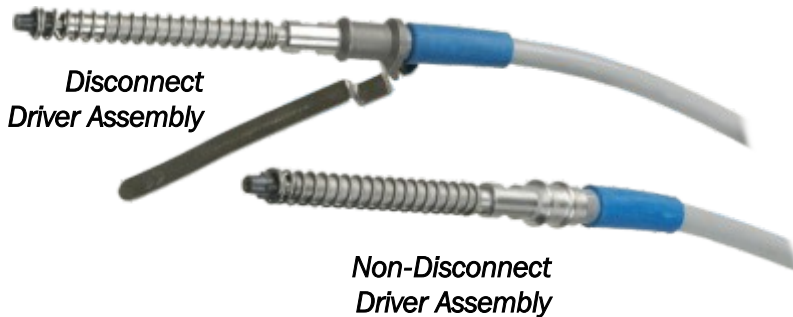

Quick-Disconnects – A spring-loaded lever that fits inside the handle instantly stops the trimmer whenever an operator's hand-grip is released.