




# Quantum Flex® Air X350/X360







### Quantum Flex® Air X440

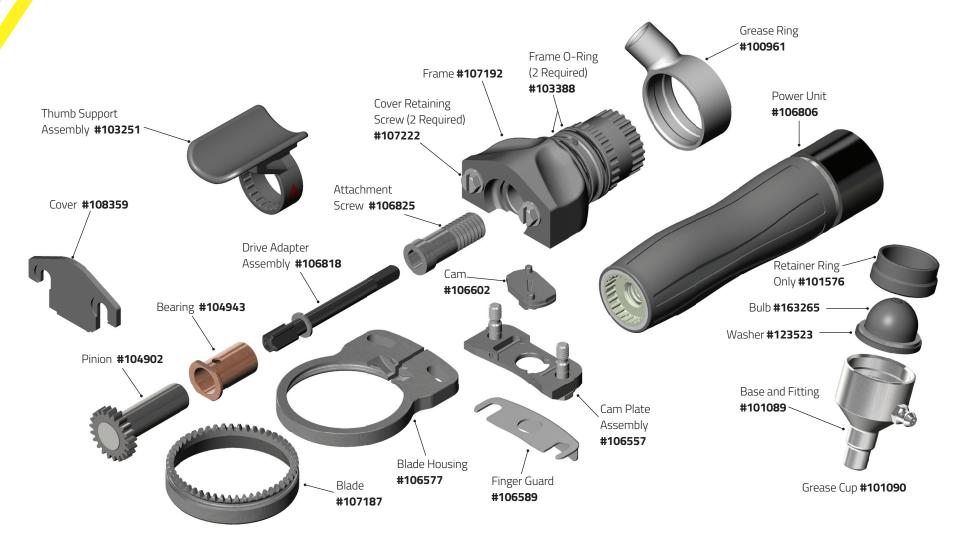









# Quantum Flex® Air X500/X505/ X500A

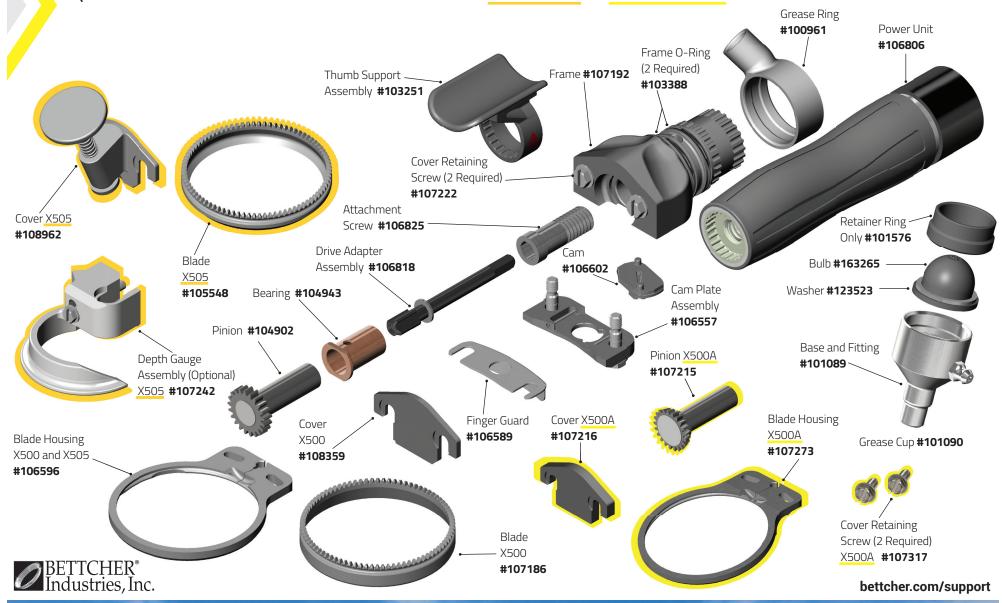





#### Quantum Flex® Air X564

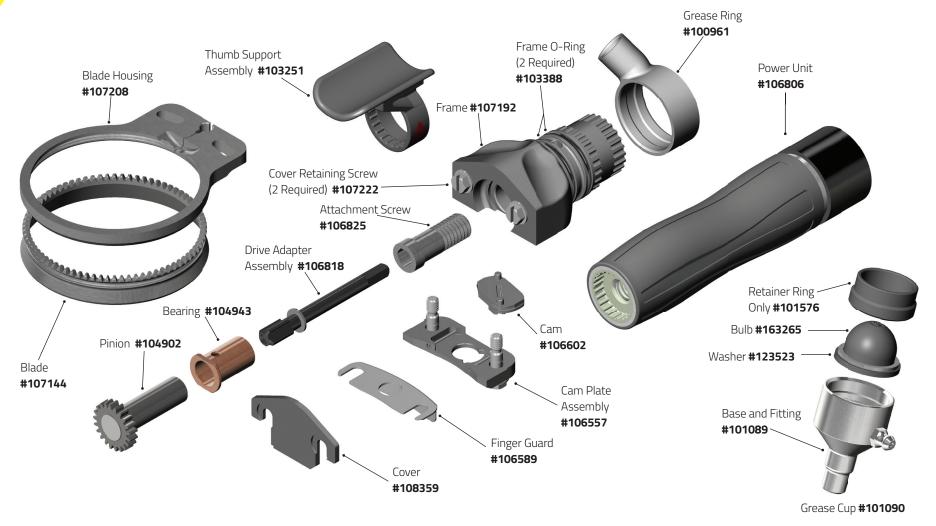








# Quantum Flex® Air X620/X625/ X620A








### Quantum Flex® Air X750

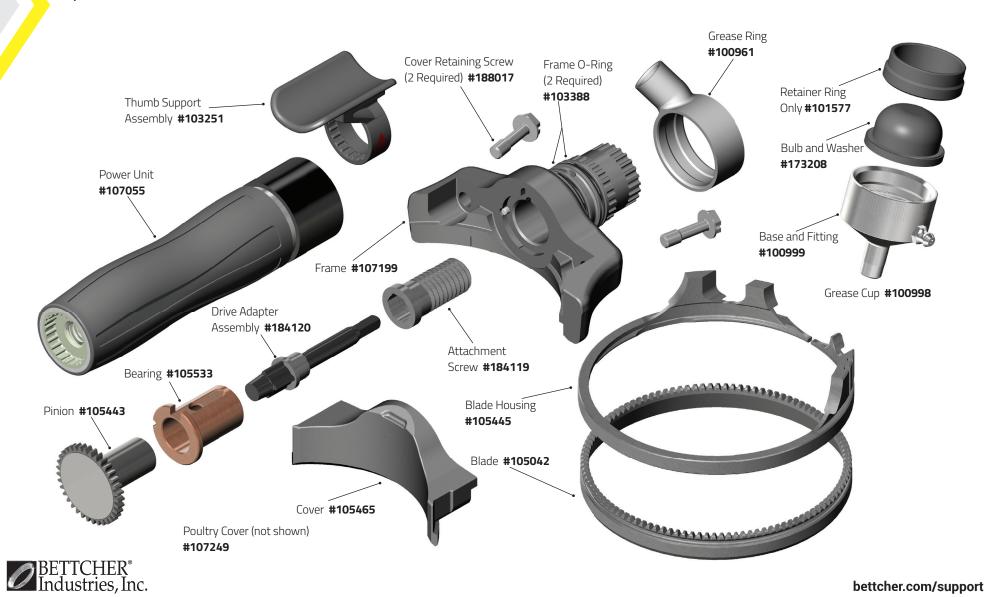






# Quantum Flex® Air X850/X880B & X880S

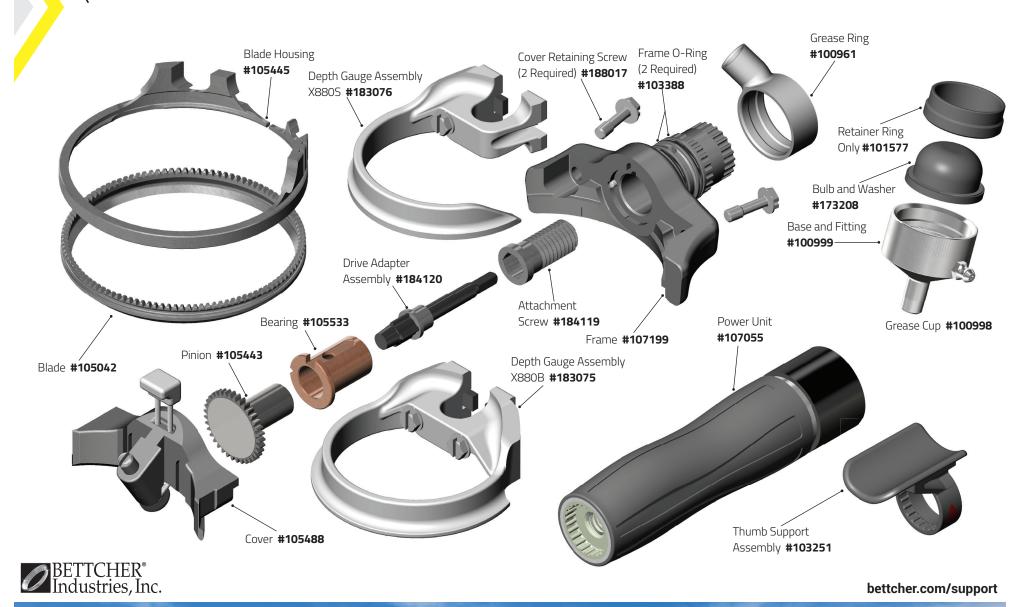






#### Quantum Flex® Air X1000 & X1500

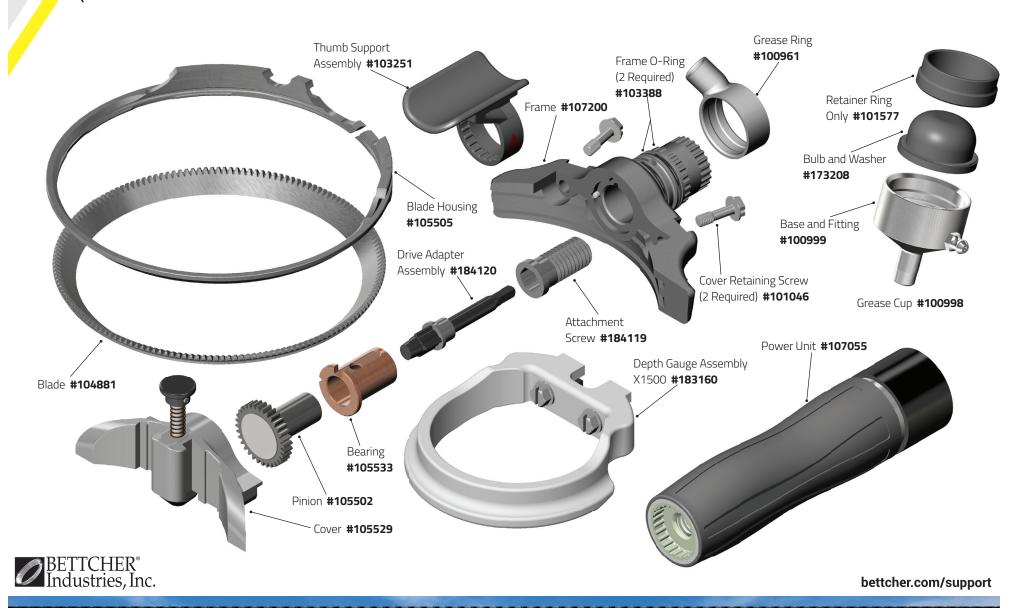





#### Quantum Flex® Air X1300 & X1400

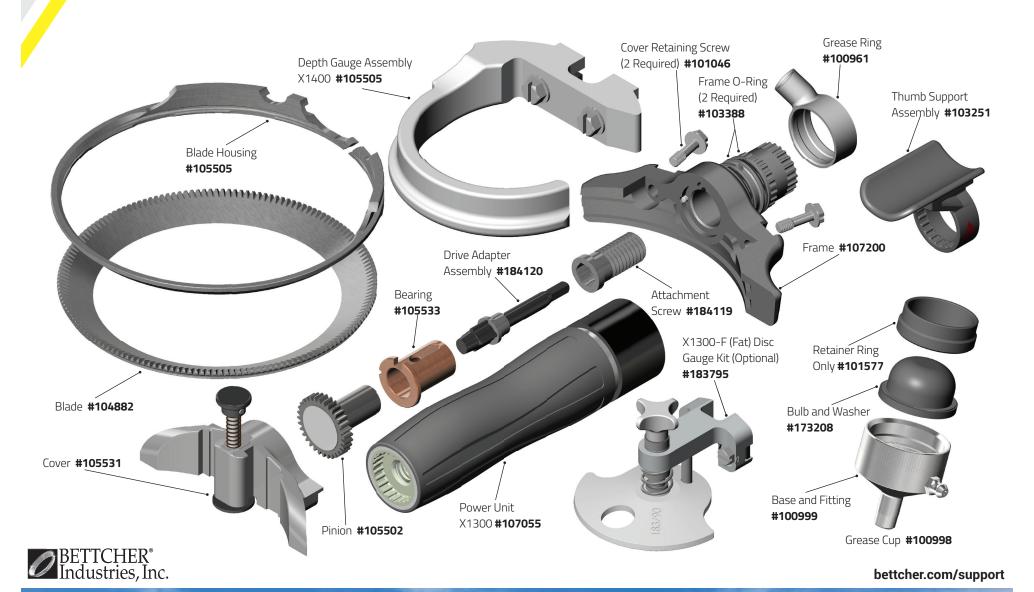






#### Quantum Flex® Air X1850 & X1880








#### Quantum Flex® Air Handle & Motor

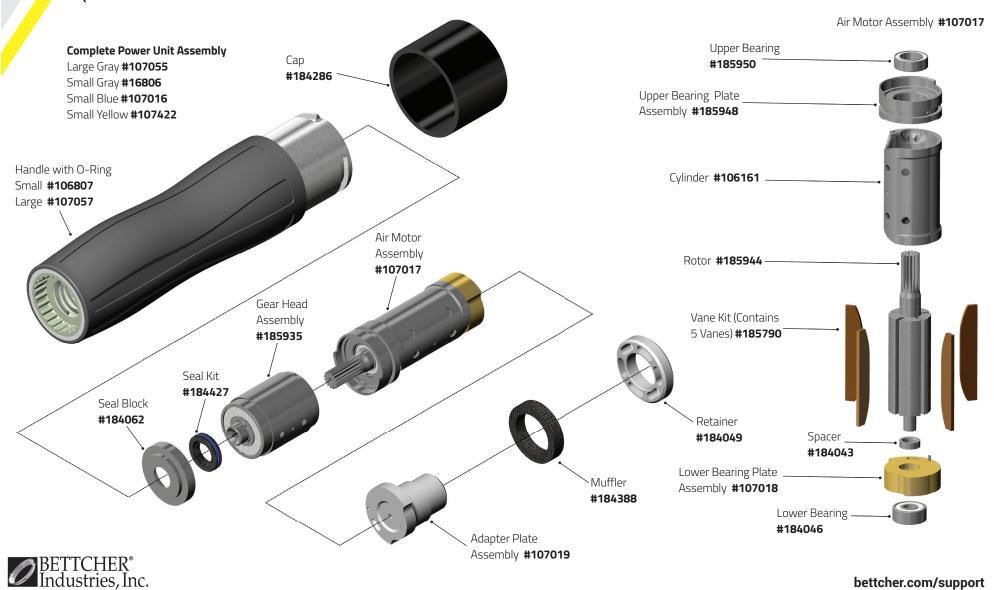





#### Quantum Flex® Air Motor Maintenance Kit

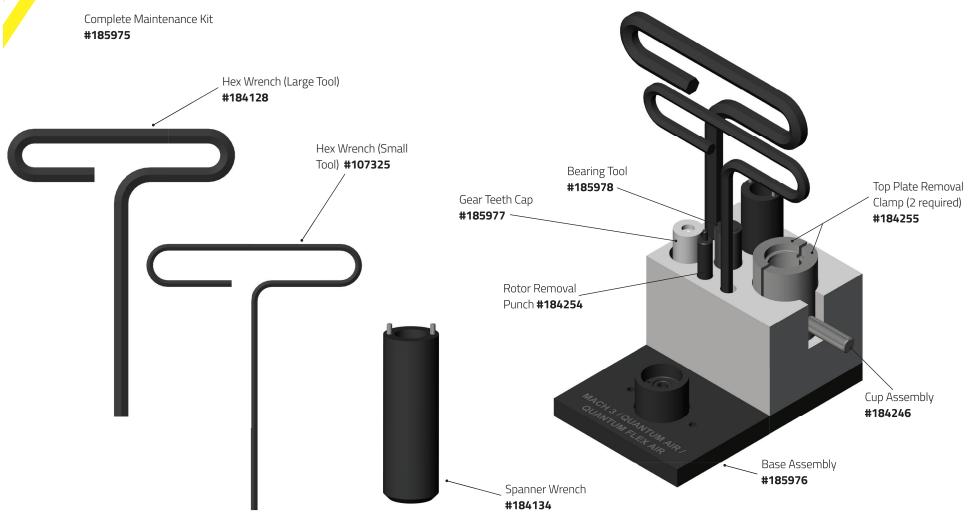









# Quantum Flex® Air Parts & Accessories

#### **Optional and Replacement Parts**

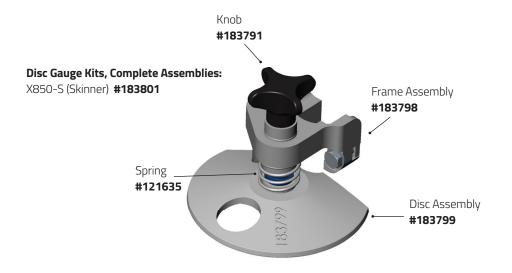

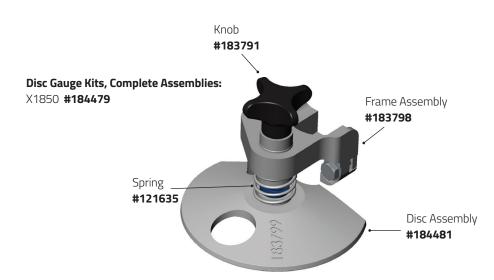









#### Quantum Flex® Air Parts & Accessories

#### **Optional and Replacement Parts**

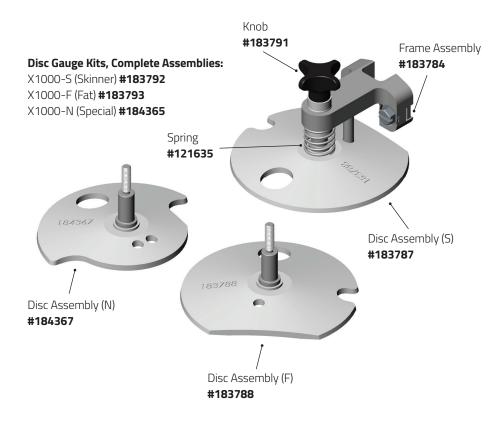

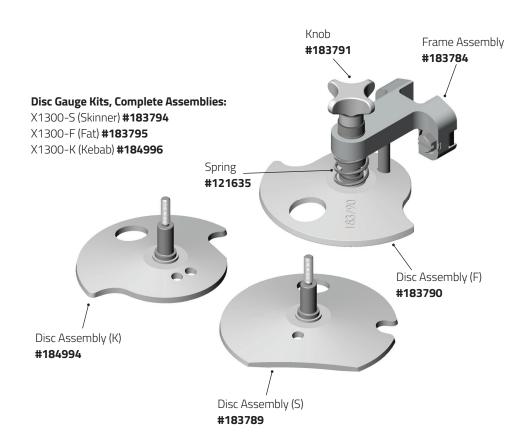








# Quantum Flex® TrimVac® 18 Head Assembly

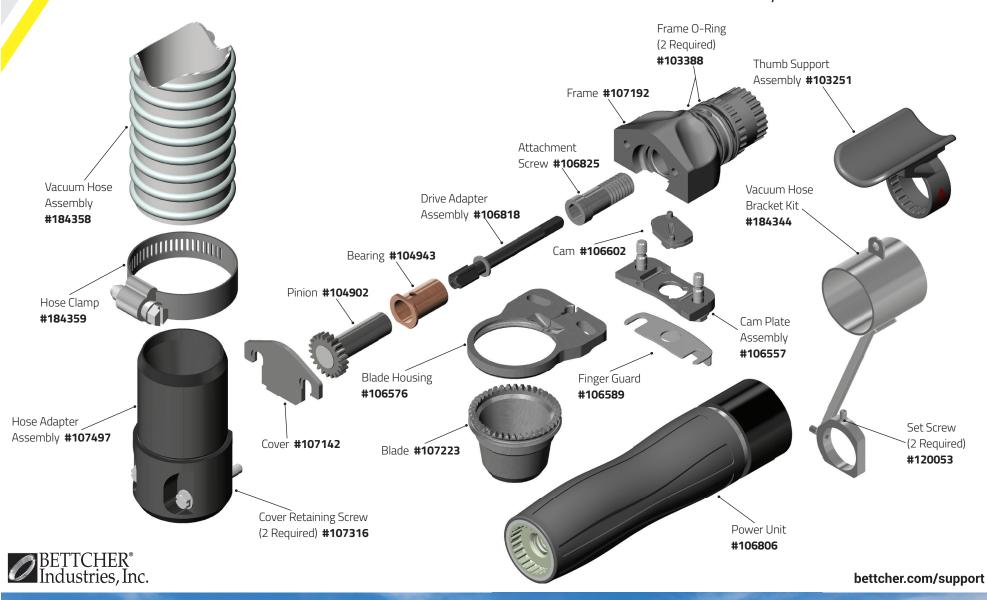






# Quantum Flex® TrimVac® 45 Head Assembly







# Valve and Hose Assembly

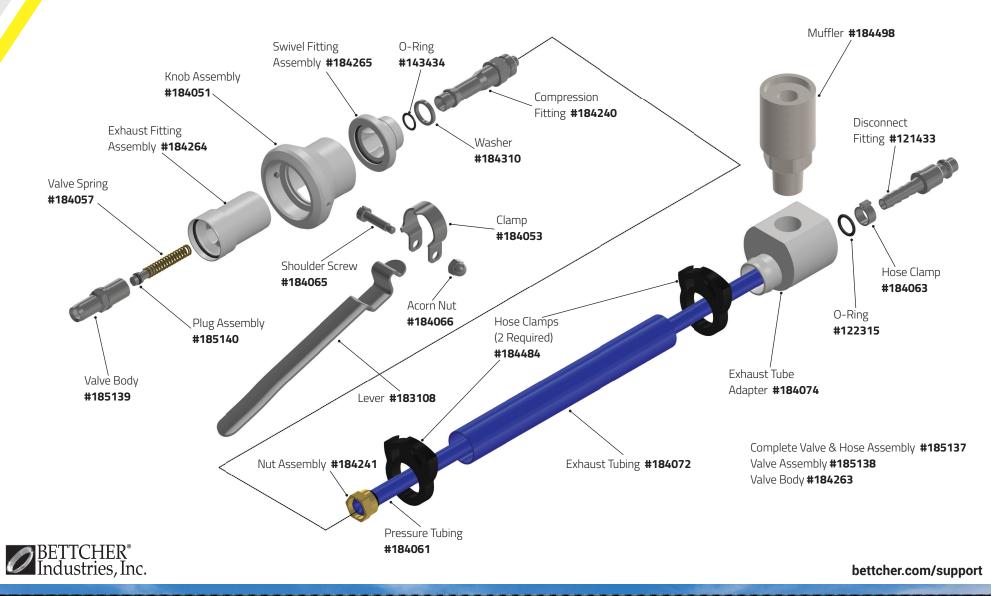





# Quick Start Valve and Hose Assembly

